

NOTE: The following applies to CE marked products only.

Declaration of Conformity – Mercury MerCruiser

This sterndrive or inboard engine when installed in accordance to Mercury MerCruisers' instructions complies with the requirements of the following directives by meeting the associated standards, as amended:

Recreational Craft Propulsion Engines with the Requirements of Directive 94/25/EC as amended by 2003/44/EC

Name of engine manufacturer: Mercury Marine MerCruiser		
Address: 3003 N. Perkins Road		
Town: Stillwater, OK	Post Code: 74075	Country: USA

Name of Authorized Representative: Brunswick Marine in EMEA Inc.		
Address: Parc Industriel de Petit-Rechain		
Town: Verviers	Post Code: 4800	Country: Belgium

Name of Notified Body for exhaust emission assessment: Det Norske Veritas AS			
Address: Veritasveien 1			
Town: Hovik	Post Code: 1322	Country: Norway	ID Number: 0575

Conformity assessment module used for exhaust emissions:		<input type="checkbox"/> B+C	<input type="checkbox"/> B+D	<input type="checkbox"/> B+E	<input type="checkbox"/> B+F	<input type="checkbox"/> G	<input checked="" type="checkbox"/> H
or engine type approved according to:		<input type="checkbox"/> stage II of Directive 97/68/EC <input type="checkbox"/> Directive 88/77/EC					
Other Community Directives applied: Electromagnetic Compatibility Directive 2004/108/EC							

Description of Engines and Essential Requirements

 
Engine Type	Fuel Type	Combustion Cycle
<input type="checkbox"/> z or sterndrive without integral exhaust	<input type="checkbox"/> Diesel	<input type="checkbox"/> 2 stroke
<input checked="" type="checkbox"/> Inboard engine	<input checked="" type="checkbox"/> Petrol	<input checked="" type="checkbox"/> 4 stroke

Identification of Engines Covered by This Declaration of Conformity

Name of engine family	Unique engine identification number: starting serial number	EC Module H certificate number
5.7 MPI (EC)	1A090000	RCD-H-1
6.2 MPI (EC)	1A091600	RCD-H-1
Horizon 5.7 (EC)	1A090000	RCD-H-1
Horizon 6.2 (EC)	1A091600	RCD-H-1
Horizon 8.1 (EC)	1A090000	RCD-H-1
8.1 HO (EC)	1A090000	RCD-H-1

Essential requirements	standards	other normative document/ method	technical file	Please specify in more detail (* = mandatory standard)
Annex 1.B—Exhaust Emissions				
B.1 engine identification	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	
B.2 exhaust emission requirements	<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	* EN ISO 8178-1:1996
B.3 durability	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	
B.4 owner's manual	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ISO 8665: 1995
Annex 1.C—Noise Emissions	see Declaration of Conformity of the craft in which the engines have been installed			

90-8M0053399 1110

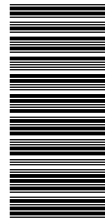

8.1 H.O. & Horizon 8.1 Models with Emissions Control

© 2012 Mercury Marine

This declaration of conformity is issued under the sole responsibility of the manufacturer. I declare on behalf of the engine manufacturer that the engines will meet the exhaust emission requirements of Directive 94/25/EC as amended by Directive 2003/44/EC when installed in a recreational craft, in accordance with the engine manufacturer's supplied instructions and that these engines must not be put into service until the recreational craft into which they are to be installed has been declared in conformity with the relevant provisions of the above mentioned Directives.

Name / function:

Kevin Grodski, President, Mercury
MerCruiser

Signature and title:



Date and place of issue: July 24, 2008
Stillwater, Oklahoma, USA

Regulatory contact:
Regulations and Product Safety Department
Mercury Marine
W6250 W. Pioneer Road
Fond du Lac, WI 54936
USA

Identification Record

Please record the following information:

Engine Model and Horsepower		Engine Serial Number
Transom Assembly Serial Number (Sterndrive)	Gear Ratio	Sterndrive Unit Serial Number
Transmission Model (Inboard)	Gear Ratio	Transmission Serial Number
Propeller Number	Pitch	Diameter
Hull Identification Number (HIN)		Purchase Date
Boat Manufacturer	Boat Model	Length

The serial numbers are the manufacturer's keys to numerous engineering details that apply to your Mercury MerCruiser® power package. When contacting your Authorized Mercury MerCruiser Dealer about service, always specify model and serial numbers.

The description and specifications contained herein were in effect at the time this guide was approved for printing. Mercury Marine, whose policy is one of continuous improvement, reserves the right to discontinue models at any time, or to change specifications or designs, without notice and without incurring obligation.

Mercury Marine, Fond du Lac, Wisconsin, U.S.A. Printed in U.S.A.

© 2009, Mercury Marine

Mercury, Mercury Marine, MerCruiser, Mercury MerCruiser, Mercury Racing, Mercury Precision Parts, Mercury Propellers, Mariner, Quicksilver, #1 On The Water, Alpha, Bravo, Bravo Two, Pro Max, OptiMax, Sport-Jet, K-Planes, MerCathode, RideGuide, SmartCraft, Zero Effort, VesselView, Zeus, Axius, Total Command, M with Waves logo, Mercury with Waves logo, and SmartCraft logo are all trademarks or registered trademarks of Brunswick Corporation. Mercury Product Protection logo is a registered service mark of Brunswick Corporation.

Welcome

You have selected one of the finest marine power packages available. It incorporates numerous design features to assure operating ease and durability.

With proper care and maintenance, you will thoroughly enjoy using this product for many boating seasons. To ensure maximum performance and carefree use, we ask that you thoroughly read this manual.

The Operation, Maintenance and Warranty Manual contains specific instructions for using and maintaining your product. We suggest that this manual remain with the product for ready reference whenever you are on the water.

Thank you for purchasing one of our Mercury MerCruiser products. We sincerely hope your boating will be pleasant!

Mercury MerCruiser

Warranty Message

The product you have purchased comes with a **limited warranty** from Mercury Marine; the terms of the warranty are set forth in the Warranty Sections of this manual. The warranty statement contains a description of what is covered, what is not covered, the duration of coverage, how to best obtain warranty coverage, important disclaimers and limitations of damages and other related information. Please review this important information.


Mercury Marine products are designed and manufactured to comply with our own high quality standards, applicable industry standards and regulations, as well as certain emissions regulations. At Mercury Marine every engine is operated and tested before it is boxed for shipment to make sure that the product is ready for use. In addition, certain Mercury Marine products are tested in a controlled and monitored environment, for up to 10 hours of engine run time, in order to verify and make a record of compliance with applicable standards and regulations. All Mercury Marine product, sold as new, receives the applicable limited warranty coverage, whether the engine participated in one of the test programs described above or not.

Read This Manual Thoroughly

IMPORTANT: If you don't understand any portion of this manual, contact your dealer for a demonstration of actual starting and operating procedures.

Notice

Throughout this publication, and on your power package, dangers, warnings, cautions, and notices, accompanied by the

International Hazard Symbol , may be used to alert the installer/user to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully.

These Safety Alerts alone cannot eliminate the hazards that they signal. Strict compliance with these special instructions while performing the service, plus common sense operation, are major accident prevention measures.

 DANGER
Indicates a hazardous situation which, if not avoided, will result in death or serious injury.


 WARNING
Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

 CAUTION
Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE
Indicates a situation which, if not avoided, could result in engine or major component failure.

IMPORTANT: Identifies information essential to the successful completion of the task.

NOTE: Indicates information that helps in the understanding of a particular step or action.

 WARNING
The operator (driver) is responsible for the correct and safe operation of the boat, the equipment aboard and the safety of all occupants aboard. We strongly recommend that the operator read this Operation, Maintenance and Warranty Manual and thoroughly understand the operational instructions for the power package and all related accessories before the boat is used.

 WARNING
The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

TABLE OF CONTENTS

Section 1 - Warranty

Warranty Registration: United States and Canada.....	2	Mercury Installation Quality Certification Program.....	9
Warranty Registration: Outside the United States and Canada.....	2	California Emissions Limited Warranty.....	10
Transfer of Warranty.....	2	What Is Covered.....	10
Mercury Product Protection Plan: United States and Canada...	3	Duration of Coverage.....	10
Mercury MerCruiser Limited Warranty (Gasoline-Fueled Products Only)	3	How to Obtain Warranty Coverage.....	10
3-Year Limited Warranty Against Corrosion.....	5	What Mercury Will Do.....	10
Global Warranty Charts.....	7	What Is Not Covered.....	11
Warranty for Consumer Applications.....	7	Disclaimers and Limitations.....	11
Warranty for Commercial Applications.....	7	California Emission Control Warranty Statement.....	11
Warranty for Government Applications.....	8	Your Warranty Rights and Obligations.....	11
Warranty for Consumer Applications.....	8	Manufacturer's Warranty Coverage.....	11
Warranty for Commercial Applications.....	8	Owner's Warranty Responsibilities.....	11
Warranty for Government Applications.....	9	Emission Control Information Label.....	12
		Owner Responsibility.....	13
		Emission Certification Star Label.....	13

Section 2 - Getting to Know Your Power Package

Identification.....	16	Panel Mount Features.....	20
Engine Serial Number Decal.....	16	Console Mount Features - Single Engine.....	21
Lanyard Stop Switch.....	16	Slim Binnacle Console Mount Features - Single Engine..	21
Instrumentation.....	17	Console Mount Features- Dual Engine.....	22
System View.....	17	Synchronizing Dual Engines.....	22
Digital Gauges.....	17	Dual Helm Station Transfer.....	23
Analog Gauges.....	18	Synchronizing Dual Helms Prior To Station Transfer...	23
Remote Controls (Non-DTS Models).....	18	Zero Effort Features.....	24
Remote Controls.....	18	Electrical System Overload Protection.....	24
Panel Mount Features.....	18	Audio Warning System.....	26
Console Mount Features.....	19	Testing The Audio Warning System.....	26
Zero Effort Features.....	19	Engine Guardian Strategy.....	26
Remote Controls (DTS Models).....	20	Transmission Guardian Strategy.....	27
Remote Controls.....	20	Warning Horn Signals.....	27

Section 3 - On the Water

Safe Boating Suggestions.....	30	Stopping the Engine.....	35
Be Alert to Carbon Monoxide Poisoning.....	31	Throttle-Only Operation.....	35
Good Ventilation.....	31	Freezing Temperature Operation.....	36
Poor Ventilation	31	Drain Plug and Bilge Pump.....	36
Basic Boat Operation (Non-DTS Models).....	32	Protecting People in the Water.....	36
Launching and Boat Operation.....	32	While You Are Cruising.....	36
Operation Chart.....	32	While Boat Is Stationary.....	36
Starting and Stopping the Engine.....	32	High-Speed and High-Performance Operation.....	36
Starting the Engine.....	32	Passenger Safety in Pontoon Boats and Deck Boats.....	36
Stopping the Engine.....	33	Boats Having an Open Front Deck.....	36
Throttle-Only Operation.....	33	Boats With Front-Mounted, Raised Pedestal Fishing Seats	
Freezing Temperature Operation.....	33	37
Drain Plug and Bilge Pump.....	33	Wave and Wake Jumping.....	37
Basic Boat Operation (DTS Models).....	33	Impact with Underwater Hazards.....	37
Launching and Boat Operation.....	33	Conditions Affecting Operation.....	38
Operation Chart.....	34	Weight Distribution (Passengers and Gear) Inside the	
Starting and Stopping the Engine.....	34	Boat.....	38
Starting the Engine.....	34	The Bottom of the Boat.....	38

Cavitation.....	38	20-Hour Break-In Period.....	39
Elevation and Climate.....	38	After Break-In Period.....	39
Getting Started.....	39	End of First Season Checkup.....	39

Section 4 - Specifications

Cruising RPM.....	42	Enging Specifications.....	43
Fuel Requirements.....	42	Horizon 8.1 and 8.1 HO with Emissions Control.....	43
Fuel Ratings.....	42	Fluid Specifications.....	44
Using Reformulated (Oxygenated) Gasoline (USA Only).....	42	Engine.....	44
Gasoline Containing Alcohol.....	42	Transmission.....	44
Engine Oil.....	43		

Section 5 - Maintenance

Owner/Operator Responsibilities.....	46	Filling the Closed Cooling System.....	52
Dealer Responsibilities.....	46	Draining.....	53
Maintenance.....	46	Cleaning.....	53
Do-It-Yourself Maintenance Suggestions.....	46	Battery.....	53
Inspection.....	47	Multiple EFI Engine Battery Precautions.....	53
Maintenance Schedule—Inboard Models.....	47	Cleaning the Flame Arrestor.....	54
Routine Maintenance.....	47	Cleaning the IAC Muffler (Non-DTS Models Only).....	54
Scheduled Maintenance.....	47	Water-Separating Fuel Filter.....	55
Maintenance Log.....	48	GEN III Models.....	56
Engine Oil.....	49	Removal.....	56
Checking.....	49	Installation.....	56
Filling.....	49	Lubrication.....	57
Changing Oil and Filter.....	50	Throttle Cable.....	57
Engine Oil Drain Pump.....	50	Shift Cable - Typical.....	57
Changing the Oil Filter.....	50	Engine Coupler.....	58
Transmission Fluid.....	51	Driveshaft Extension Models.....	58
Checking While the Engine is Warm.....	51	Serpentine Drive Belt.....	59
Checking While Engine is Cold.....	51	Belt Routing.....	59
Changing.....	51	Checking.....	59
Closed Cooling System.....	51	Replacing.....	59
Coolant Requirement.....	51	Flushing the Seawater System—Inboard Models.....	60
Checking Coolant Level.....	51	The Boat Out of the Water—Inboard Models.....	60
.....	51	The Boat in the Water—Inboard Models.....	61

Section 6 - Storage

Cold Weather or Extended Storage.....	64	Boat in the Water.....	66
Preparing Power Package for Storage.....	64	Boat Out of the Water.....	68
Engine and Fuel System Preparation.....	64	Manual Drain System.....	70
Draining the Seawater System.....	65	Boat in the Water.....	70
Drain System Identification.....	66	Boat out of the Water.....	70
Air Actuated Single Point Drain System.....	66	Battery Storage.....	70
Manual Drain System.....	66	Recommissioning the Power Package.....	71
Air Actuated Single Point Drain System.....	66		

Section 7 - Troubleshooting

Diagnosing EFI Problems.....	74	Starter Motor Will Not Crank Engine, or Cranks Slowly..	74
Diagnosing DTS Problems.....	74	Engine Will Not Start or Is Hard to Start.....	74
Engine Guardian System.....	74	Engine Runs Rough, Misses, or Backfires.....	75
Troubleshooting Charts.....	74	Poor Performance.....	75

Excessive Engine Temperature.....	75
Insufficient Engine Temperature.....	75
Low Engine Oil Pressure.....	76
Battery Will Not Recharge.....	76

Remote Control Is Difficult to Move, Has Excessive Play, or Makes Unusual Sounds.....	76
Steering Wheel Jerks or Is Difficult to Turn.....	76

Section 8 - Customer Assistance Information

Owner Service Assistance.....	78
Local Repair Service.....	78
Service Away From Home.....	78
Stolen Power Package.....	78
Attention Required after Submersion.....	78
Replacement Service Parts.....	78

Parts and Accessories Inquiries.....	78
Resolving a Problem.....	78
Mercury Marine Service Offices.....	79
Ordering Literature.....	79
United States and Canada.....	79
Outside the United States and Canada.....	80

Section 1 - Warranty

1

Table of Contents

Warranty Registration: United States and Canada.....	2	Mercury Installation Quality Certification Program.....	9
Warranty Registration: Outside the United States and Canada	2	California Emissions Limited Warranty.....	10
Transfer of Warranty.....	2	What Is Covered	10
Mercury Product Protection Plan: United States and Canada	3	Duration of Coverage	10
Mercury MerCruiser Limited Warranty (Gasoline-Fueled	3	How to Obtain Warranty Coverage	10
Products Only)	3	What Mercury Will Do	10
3-Year Limited Warranty Against Corrosion.....	5	What Is Not Covered	11
Global Warranty Charts.....	7	Disclaimers and Limitations	11
Warranty for Consumer Applications.....	7	California Emission Control Warranty Statement.....	11
Warranty for Commercial Applications.....	7	Your Warranty Rights and Obligations	11
Warranty for Government Applications.....	8	Manufacturer's Warranty Coverage	11
Warranty for Consumer Applications.....	8	Owner's Warranty Responsibilities	11
Warranty for Commercial Applications.....	8	Emission Control Information Label.....	12
Warranty for Government Applications.....	9	Owner Responsibility	13
		Emission Certification Star Label.....	13

Warranty Registration: United States and Canada

To ensure that your warranty coverage begins promptly, your selling dealer should fill out the Warranty Registration Card completely and mail it to the factory immediately upon sale of the new product.

The Warranty Registration Card identifies the name and address of the original purchaser, product model and serial number(s), date of sale, type of use and selling dealer's code, name, and address. The dealer also certifies that you are the original purchaser and user of the product. A temporary Owner Warranty Registration Card will be presented to you when you purchase the product.

Upon receipt of the Warranty Registration Card at the factory, Mercury MerCruiser will send you an owner resource guide that includes your warranty registration confirmation. If you do not receive your owner resource guide within 60 days from date of new product sale, please contact your selling dealer.

Because of your selling dealer's ongoing interest in your satisfaction, the product should be returned to him for warranty service.

The product warranty is not effective until the product is registered at the factory.

NOTE: *Registration lists must be maintained by the factory and dealer on marine products sold in the United States in the event that a safety recall notification under the Federal Boat Safety Act is required.*

You may change your address at any time, including at time of warranty claim, by calling Mercury MerCruiser or sending a letter or fax to Mercury MerCruiser's warranty registration department with your name, old address, new address, and engine serial number. Your dealer can also process this change of information.

United States customers or dealers may contact:

Mercury Marine
Attn: Warranty Registration Department
W6250 Pioneer Road
P.O. Box 1939
Fond du Lac, WI 54936-1939
920-929-5054
Fax 920-929-5893

Canadian customers or dealers may contact:

Mercury Marine Canada Limited
2395 Meadowpine Blvd.
Mississauga,
Canada, L5N 7W6
Fax 1-800-663-8334

Warranty Registration: Outside the United States and Canada

To ensure that your warranty coverage begins promptly, your selling dealer should fill out the warranty registration card completely and mail it to the distributor responsible for administering the warranty registration and claim program for your area.

The warranty registration card identifies your name and address, product model and serial numbers, date of sale, type of use, and the selling distributor's and dealer's code number, name, and address. The distributor or dealer also certifies that you are the original purchaser and user of the product. A copy of the warranty registration card, designated as the purchaser's copy, **MUST** be given to you immediately after the card has been completely filled out by the selling distributor or dealer. This card represents your factory registration identification. Keep the card; if you ever need warranty service on this product, your dealer may ask you for the warranty registration card to verify date of purchase and to use the information on the card to prepare the warranty claim forms.

In some countries, the distributor will issue a permanent (plastic) warranty registration card to you within 30 days after receiving the factory copy of the warranty registration card from your distributor or dealer. If you receive a plastic warranty registration card, you may discard the purchaser's copy that you received from the distributor or dealer when you purchased the product. Ask your distributor or dealer if this plastic card program applies to you. For further information concerning the warranty registration card and its relationship to warranty claim processing, refer to the International Warranty. See Table of Contents.

NOTE: *Registration lists must be maintained by the factory and dealer on marine products sold in the United States in the event of a safety recall notification under the Federal Boat Safety Act.*

Transfer of Warranty

The limited warranty is transferable to a subsequent purchaser, but only for the remainder of the unused portion of the limited warranty. This will not apply to products used for commercial applications.

To transfer the warranty to the subsequent owner, send or fax a copy of the bill of sale or purchase agreement, new owner's name, address and engine serial number to Mercury Marine's warranty registration department. In the United States mail to:

Mercury Marine
 Attn: Warranty Registration Department
 W6250 W. Pioneer Road
 P.O. Box 1939
 Fond du Lac, WI 54936-1939
 920-929-5054
 Fax 920-929-5893

In Canada mail to:
 Mercury Marine Canada Limited
 2395 Meadowpine Blvd.
 Mississauga,
 Canada, L5N 7W6
 Fax 1-800-663-8334

Upon processing the transfer of warranty, Mercury Marine will send registration verification to the new owner of the product by mail.

There is no charge for this service.

For products purchased outside the United States and Canada, contact the distributor in your country, or the distributor closest to you.

Mercury Product Protection Plan: United States and Canada

(Certain performance products, triple engine installations, and commercial applications are excluded.)

The Mercury Product Protection Plan provides coverage against unexpected mechanical and electrical breakdowns that may occur beyond the standard limited warranty.

The optional Mercury Product Protection Plan is the only Factory Plan available for your engine.

One-, two-, three-, four-, or five- year term plans can be purchased up to 12 months after the original engine registration date.

See your participating Mercury MerCruiser dealer for complete program details.

Mercury MerCruiser Limited Warranty (Gasoline-Fueled Products Only)

Mercury MerCruiser Limited Warranty (Gasoline-Fueled Products Only)

What is Covered

Mercury Marine warrants its new products to be free of defects in material and workmanship during the period described following.

Duration of Coverage

Warranty Period for Recreational Use

The warranty period begins on the date the product is first sold to a recreational-use retail purchaser or the date on which the product is first put into service, whichever occurs first. Products installed by an Installation Quality Certified Installer receive one (1) year of additional warranty coverage. The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date. The warranty period is specific to the model covered; see your model for the base coverage period:

Coverage for Horizon Inboard Models, and Vazer 100 Sterndrive Models

The Limited Warranty for Horizon Inboard Models and Vazer 100 Models is four (4) years when installed by an Installation Quality Certified Installer or three (3) years for non-certified installations.

Coverage for SeaCore Sterndrive Models

The Limited Warranty for SeaCore Sterndrive Models is four (4) years when installed by an Installation Quality Certified Installer or three (3) years for non-certified installations.

Coverage for Tow Sports Inboard Models

The Limited Warranty for Tow Sports 5.7 TKS models is two (2) years when installed by an Installation Quality Certified Installer or one (1) year for non-certified installations.

The Limited Warranty for all other Tow Sports Inboard models is three (3) years when installed by an Installation Quality Certified Installer or two (2) years for non-certified installations.

Coverage for All Other Models

The Limited Warranty for all other Gasoline Sterndrive and Inboard models except those described above is two (2) years when installed by an Installation Quality Certified Installer or one (1) year for non-certified installations.

Warranty Period for Commercial Use

The warranty period begins on the date the product is first sold to a commercial-use retail purchaser or the date on which the product is first put into service, whichever occurs first. Commercial users of these products receive warranty coverage for either one (1) year from the date of first retail sale or the accumulation of 500 hours of operation, whichever occurs first. Commercial use is defined as any work-related or employment-related use of the product, or any use of the product that generates income for any part of the warranty period, even if the product is only occasionally used for such purposes. The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

Transfer of Coverage

Unexpired warranty coverage can be transferred from one recreational-use customer to a subsequent recreational-use customer upon proper reregistration of the product. Unexpired warranty coverage cannot be transferred either to or from a commercial-use customer.

Termination of Coverage

Warranty coverage is terminated for used product obtained in any of the following ways:

- Repossession from a retail customer
- Purchase at auction
- Purchase from a salvage yard
- Purchase from an insurance company that obtained the product as a result of an insurance claim

Conditions That Must Be Met in Order to Obtain Warranty Coverage

Warranty coverage is available only to retail customers that purchase from a dealer authorized by Mercury Marine to distribute the product in the country in which the sale occurred, and then only after the pre-delivery inspection process specified by Mercury Marine is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Inaccurate warranty registration information regarding recreational use or subsequent change of use from recreational to commercial (unless properly reregistered) may void the warranty at the sole discretion of Mercury Marine. Routine maintenance must be performed according to the maintenance schedule in the Operation, Maintenance & Warranty manual in order to obtain warranty coverage. Mercury Marine reserves the right to make any warranty coverage contingent upon proof of proper maintenance.

What Mercury Marine Will Do

Mercury Marine's sole and exclusive obligation under this warranty is limited to, at our option, repairing a defective part, replacing such part or parts with new or Mercury Marine certified remanufactured parts, or refunding the purchase price of the Mercury Marine product. Mercury Marine reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

How to Obtain Warranty Coverage

The customer must provide Mercury Marine with a reasonable opportunity to repair and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Mercury Marine dealer authorized to service the product. If the purchaser cannot deliver the product to such a dealer, written notice must be given to Mercury Marine. Mercury Marine will then arrange for the inspection and any covered repair. The purchaser in that case shall pay for all related transportation charges and travel time. If the service provided is not covered by this warranty, the purchaser shall pay for all related labor and material and any other expenses associated with that service. The purchaser shall not, unless requested by Mercury Marine, ship the product or parts of the product directly to Mercury Marine. Proof of registered ownership must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

What Is Not Covered

This limited warranty does not cover the following:

- Routine maintenance items
- Adjustments
- Normal wear and tear
- Damage caused by abuse
- Abnormal use
- Use of a propeller or gear ratio that does not allow the engine to run in its recommended RPM range (see the Operation, Maintenance & Warranty manual)
- Operation of the product in a manner inconsistent with the recommended operation and duty cycle section of the Operation, Maintenance & Warranty manual
- Neglect
- Accident
- Submersion
- Improper installation (proper installation specifications and techniques are set forth in the installation instructions for the product)
- Improper service
- Use of an accessory or part that was not manufactured or sold by Mercury Marine and that damages the Mercury product
- Jet pump impellers and liners
- Operation with fuels, oils, or lubricants that are not suitable for use with the product (see the Operation, Maintenance & Warranty manual)
- Alteration or removal of parts
- Water entering the engine through the fuel intake, air intake, or exhaust system or damage to the product from insufficient cooling water caused by blockage of the cooling system by a foreign body
- Running the engine out of water
- Mounting the engine too high on the transom
- Operating the boat with the engine over trimmed

Use of the product for racing or other competitive activity, or operating with a racing-type lower unit at any point, even by a previous owner of the product, voids the warranty. Expenses related to haul-out, launch, towing, storage, telephone, rental, inconvenience, slip fees, insurance coverage, loan payments, loss of time, loss of income, or any other type of incidental or consequential damages are not covered by this warranty. Also, expenses associated with the removal or replacement of boat partitions or other material in order to gain access to the product are not covered by this warranty. No individual or entity, including Mercury Marine authorized dealers, has been given authority by Mercury Marine to make any affirmation, representation, or warranty regarding the product, other than those contained in this limited warranty. If such affirmation, representation, or warranty is made, it shall not be enforceable against Mercury Marine.

DISCLAIMERS AND LIMITATIONS

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/COUNTRIES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

3-Year Limited Warranty Against Corrosion

3-YEAR LIMITED WARRANTY AGAINST CORROSION**What Is Covered**

Mercury Marine warrants that each new Mercury, Mariner, Mercury Racing, Sport Jet, M² Jet Drive, Tracker by Mercury Marine Outboard, MerCruiser Inboard or Sterndrive engine (Product) will not be rendered inoperative as a direct result of corrosion for the period of time described below.

Duration of Coverage

This limited corrosion warranty provides coverage for three (3) years from either the date the product is first sold, or the date on which the product is first put into service, whichever occurs first. The repair and replacement of parts, or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date. Unexpired warranty coverage can be transferred to subsequent (noncommercial use) purchaser upon proper re-registration of the product. Warranty coverage is terminated for used product repossessed from a retail customer, purchased at auction, from a salvage yard, or from an insurance company that obtained the product as a result of an insurance claim.

Condition That Must Be Met in Order to Obtain Warranty Coverage

Warranty coverage is available only to retail customers that purchase from a dealer authorized by Mercury Marine to distribute the product in the country in which the sale occurred, and then only after the Mercury Marine specified pre-delivery inspection process is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Corrosion prevention devices specified in the Operation, Maintenance & Warranty manual must be in use on the boat, and routine maintenance outlined in the Operation, Maintenance & Warranty manual must be timely performed (including without limitation the replacement of sacrificial anodes, use of specified lubricants, and touch-up of nicks and scratches) in order to maintain warranty coverage. Mercury Marine reserves the right to make warranty coverage contingent upon proof of proper maintenance.

What Mercury Will Do

Mercury's sole and exclusive obligation under this warranty is limited to, at our option, repairing a corroded part, replacing such part or parts with new or Mercury Marine certified re-manufactured parts, or refunding the purchase price of the Mercury product. Mercury reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

How to Obtain Warranty Coverage

The customer must provide Mercury with a reasonable opportunity to repair, and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Mercury dealer authorized to service the product. If purchaser cannot deliver the product to such a dealer, written notice must be given to Mercury. We will then arrange for the inspection and any covered repair. Purchaser in that case shall pay for all related transportation charges and/or travel time. If the service provided is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Purchaser shall not, unless requested by Mercury, ship the product or parts of the product directly to Mercury. Proof of registered ownership must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

What Is Not Covered

This limited warranty does not cover electrical system corrosion; corrosion resulting from damage, corrosion which causes purely cosmetic damage, abuse or improper service; corrosion to accessories, instruments, steering systems; corrosion to factory installed jet drive unit; damage due to marine growth; product sold with less than a one year limited Product warranty; replacement parts (parts purchased by the Customer); products used in a commercial application. Commercial use is defined as any work or employment related use of the product, or any use of the product which generates income, for any part of warranty period, even if the product is only occasionally used for such purposes.

Global Warranty Charts

Warranty for Consumer Applications

Engine Model	Region	Standard Factory Limited Warranty by Certification Status of Boat Manufacturer		Consumer Limited Corrosion Warranty
		Not Certified	Installation Quality Certified	
Horizon 8.1 with Emissions Control	The Americas (excluding Brazil)	3 years	4 years	3 years
	Brazil	2 years	2 years	2 years
	Europe, Middle East, Africa		3 years	3 years
	Australia, New Zealand		2 years	
	Japan	1 year	1 year	1 year
	South Pacific	2 years	2 years	2 years
	Other Asia	1 year	1 year	1 year

Warranty for Commercial Applications

Engine Model	Region	Standard Factory Limited Warranty by Certification Status of Boat Manufacturer		Commercial Limited Corrosion Warranty
		Not Certified	Installation Quality Certified	
Horizon 8.1 with Emissions Control	The Americas (excluding Brazil)	1 year	1 year	1 year
	Brazil	2 years	2 years	2 years
	Europe, Middle East, Africa	1 year or 500 hours	1 year or 500 hours	1 year or 500 hours
	Australia, New Zealand			
	Japan			
	South Pacific			
	Other Asia			

Warranty for Government Applications

Engine Model	Region	Standard Factory Limited Warranty by Certification Status of Boat Manufacturer		Government Limited Corrosion Warranty
		Not Certified	Installation Quality Certified	
Horizon 8.1 with Emissions Control	The Americas (excluding Brazil)	1 year	1 year	3 years
	Brazil	2 years	2 years	2 years
	Europe, Middle East, Africa	1 year or 500 hours	1 year or 500 hours	3 years
	Australia, New Zealand			1 year or 500 hours
	Japan			
	South Pacific			
	Other Asia			

Warranty for Consumer Applications

Engine Model	Region	Standard Factory Limited Warranty by Certification Status of Boat Manufacturer		Consumer Limited Corrosion Warranty
		Not Certified	Installation Quality Certified	
8.1 HO with Emissions Control	The Americas (excluding Brazil)	1 year	2 years	3 years
	Brazil	2 years		2 years
	Europe, Middle East, Africa		3 years	3 years
	Australia, New Zealand		2 years	
	Japan	1 year	1 year	1 year
	South Pacific	2 years	2 years	2 years
	Other Asia	1 year	1 year	1 year

Warranty for Commercial Applications

Engine Model	Region	Standard Factory Limited Warranty by Certification Status of Boat Manufacturer		Commercial Limited Corrosion Warranty
		Not Certified	Installation Quality Certified	
8.1 HO with Emissions Control	The Americas (excluding Brazil)	1 year	1 year	1 year
	Brazil	2 years	2 years	2 years
	Europe, Middle East, Africa	1 year or 500 hours	1 year or 500 hours	1 year or 500 hours
	Australia, New Zealand			
	Japan			
	South Pacific			
	Other Asia			

Warranty for Government Applications

Engine Model	Region	Standard Factory Limited Warranty by Certification Status of Boat Manufacturer		Government Limited Corrosion Warranty
		Not Certified	Installation Quality Certified	
8.1 HO with Emissions Control	The Americas (excluding Brazil)	1 year	1 year	3 years
	Brazil	2 years	2 years	2 years
	Europe, Middle East, Africa	1 year or 500 hours	1 year or 500 hours	3 years
	Australia, New Zealand			1 year or 500 hours
	Japan			
	South Pacific			
	Other Asia			

Mercury Installation Quality Certification Program



15502

Mercury MerCruiser products installed by a Mercury Installation Quality Certified Manufacturer are Installation Quality certified products and may receive an additional one (1) year of limited warranty coverage.

The Installation Quality Certification program was developed to recognize MerCruiser boatbuilder customers who have achieved higher manufacturing standards. It is the first and only comprehensive manufacturer-installation certification program in the industry.

The program has three goals:

1. To enhance overall product quality.
2. To improve the boat ownership experience.
3. To enhance overall customer satisfaction.

The certification process is designed to review all facets of manufacturing and engine installation. The program is composed of design, manufacturing and installation review stages with which builders must comply. Certification applies leading-edge methodologies to create:

- Efficiencies and best practices specific to engine installation.
- World-class assembly and component specifications.
- Efficient installation processes.
- Industry standard end-of-line test procedures

Boat builders that successfully complete the program and meet all certification requirements earn Installation Quality System Certified Manufacturer status and receive an additional one (1) year of Mercury limited factory warranty coverage on all MerCruiser-powered boats that are registered on and after the boat builder's certification date for all worldwide registrations.

Section 1 - Warranty

Mercury has designated a section of our Website to promote the Installation Quality Certification Program and communicate its benefits to consumers. For a current list of MerCruiser-powered boat brands that have earned Installation Quality Certification, visit www.mercurymarine.com/mercruiser_warranty.

California Emissions Limited Warranty

NOTE: Mercury Marine does not establish model years for the Mercury MerCruiser product line. In order to comply with CARB warranty regulations, and for that limited purpose only, model year shall have the same meaning as calendar year. As an example, 2003 model year products refers to products manufactured during calendar year 2003.

The California Air Resources Board has promulgated air emissions regulations for inboard and sterndrive engines. The regulations apply to all inboard and sterndrive engines that were manufactured for the 2003 model year and later. Mercury Marine, in compliance with those regulations, provides this limited warranty for the emission control systems (see the components of the emission control system listed following), and further warrants that the inboard or sterndrive engine was designed, built, and equipped to conform with all applicable regulations adopted by the California Air Resources Board pursuant to its authority in Chapters 1 and 2, Part 5, Division 26 of the Health and Safety Code. For information regarding the limited warranty for the non-emissions related components of the inboard or sterndrive engine, please see the limited warranty statement for your engine.

What Is Covered

NOTE: Your dealer will register your engine for warranty coverage for you. The warranty registration process is not related in any way to the process of obtaining a license, title or registration from state boating authorities. You should ask your dealer to update your warranty registration information to reflect a change of address or a transfer of ownership. (This change may be made at any time.) Refer to the Warranty Registration information in your owners manual or to your dealer for more information.

Mercury Marine warrants the components of the emissions control systems (see the components of the emission control system listed following) of its new, 2003 model year and later California-certified inboard and sterndrive engines, registered to a California resident, to be free from defects in material or workmanship that cause the failure of a warranted part to be identical in all material respects to that part as described in the application of Mercury Marine for certification from the California Air Resources Board, for the period of time, and under the conditions identified below. The cost to diagnose a warranty failure is covered if the warranty claim is approved. Damage to other engine components caused by the failure of a warranted part will also be repaired under warranty.

Duration of Coverage

NOTE: Mercury Marine does not establish model years for the Mercury MerCruiser product line. In order to comply with CARB warranty regulations, and for that limited purpose only, model year shall have the same meaning as calendar year. As an example, 2003 model year products refers to products manufactured during calendar year 2003

This limited warranty provides coverage for the components of the emissions control systems. Specific emission control related parts on new inboard or sterndrive engines are warranted for 3 years or 480 hours, whichever first occurs, from either the date the product is first sold, or first put into service, whichever occurs first. Emission related normal maintenance items such as spark plugs and filters, that are on the warranted parts list are warranted up to their first required replacement interval only. Refer to **Emission Control System Components** and **Maintenance Schedule**. The repair or replacement of parts, or the performance of service under this warranty, does not extend the life of this warranty beyond its original expiration date. Unexpired warranty coverage can be transferred to a subsequent purchaser. Refer to **Transfer of Warranty**.

How to Obtain Warranty Coverage

The customer must provide Mercury with a reasonable opportunity to repair and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Mercury dealer authorized to service the product. If purchaser cannot deliver the product to such a dealer, please notify Mercury Marine and Mercury will then arrange for the inspection and any covered repair. Purchaser in that case shall pay for all related transportation charges and/or travel time. If the service provided is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Purchaser shall not, unless requested by Mercury, ship the product or parts of the product directly to Mercury.

What Mercury Will Do

Mercury Marine's sole and exclusive obligation under this warranty is limited to, at our expense and at our option, repairing or replacing defective parts with new or Mercury Marine certified re-manufactured parts, or refunding the purchase price of the Mercury product. Mercury reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

What Is Not Covered

This limited warranty does not cover routine maintenance items, tune ups, adjustments, normal wear and tear, damage caused by abuse, abnormal use, use of a propeller or gear ratio that does not allow the engine to run in its recommended wide-open-throttle RPM range (see Specifications), operation of the product in a manner inconsistent with the recommended operation procedures, neglect, accident, submersion, improper installation (proper installation specifications and techniques are set forth in the installation instructions for the product), improper service, jet pump impellers and liners, operation with fuels, oils or lubricants which are not suitable for use with the product (see Specifications), alteration or removal of parts.

Expenses related to haul-out, launch, towing, storage, telephone, rental, inconvenience, slip fees, insurance coverage, loan payments, loss of time, loss of income, or any other type of incidental or consequential damages are not covered by this warranty. Also, expenses associated with the removal and/or replacement of boat partitions or material caused by boat design for access to the product are not covered by this warranty.

Non-warranty maintenance, replacement, or repair of emission control devices and systems may be performed by any marine engine repair establishment or individual. The use of non-Mercury parts for non-warranty maintenance or repairs will not be grounds for disallowing other warranty work. The use of add-on (as defined at section 1900 (b)(1) and (b)(10) of Title 13 of the California Code of Regulations) or modified parts not exempted by the California Air Resources Board may be grounds for disallowing a warranty claim, at the discretion of Mercury Marine. Failures of warranted parts caused by the use of a non-exempted add-on or modified part will not be covered.

Disclaimers and Limitations

DISCLAIMERS AND LIMITATIONS

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/COUNTRIES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

If you have any questions regarding your warranty rights and responsibilities, refer to Owner Service Assistance for contact information.

California Emission Control Warranty Statement

Your Warranty Rights and Obligations

NOTE: Mercury Marine does not establish model years for the Mercury MerCruiser product line. In order to comply with CARB warranty regulations, and for that limited purpose only, model year shall have the same meaning as calendar year. As an example, 2003 model year products refers to products manufactured during calendar year 2003.

The California Air Resources Board is pleased to explain the emission control system warranty on your 2003 model year and later inboard or sterndrive engine. In California, new inboard and sterndrive engines must be designed, built and equipped to meet the State's stringent anti-smog standards. Mercury Marine must warrant the emission control system on your inboard or sterndrive engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your inboard or sterndrive engine.

Your emission control system may include parts such as the carburetor or fuel injection system, the ignition system, and catalytic converter. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Mercury Marine will repair your inboard or sterndrive engine at no cost to you; including diagnosis, parts and labor.

Manufacturer's Warranty Coverage

Select emission control parts from 2009 and later (inboard or sterndrive) engines are warranted for 3 years or 480 hours, whichever first occurs. However, warranty coverage based on the hourly period is only permitted for engines that are equipped with hour meters as defined in s 2441(a)(13) or their equivalent. If any emission-related part on your engine is defective under warranty, the part will be repaired or replaced by Mercury Marine.

Owner's Warranty Responsibilities

As the inboard or sterndrive engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Mercury Marine recommends that you retain all receipts covering maintenance on your inboard or sterndrive engine, but Mercury Marine cannot deny warranty solely for the lack of receipts or your failure to ensure the performance of all scheduled maintenance.

Section 1 - Warranty

As the inboard or sterndrive engine owner, you should however be aware that Mercury Marine may deny you warranty coverage if your inboard or sterndrive engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.



You are responsible for presenting your inboard or sterndrive engine to a Mercury Marine dealer authorized to service the product as soon as a problem exists. The warranty repairs will be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, refer to Owner Service Assistance for contact information.

Emission Control Information Label

A tamper-resistant Emission Control Information label is affixed in a visible location to the engine at time of manufacture by Mercury MerCruiser. In addition to the required emissions statement, the label lists the engine serial number, family, STD (emission standard/level), date of manufacture (month, year), and the engine displacement. Please note that the low emissions certification will not affect the fit, function, or performance of the engines. Boatbuilders and dealers may not remove the label or the part it is affixed to before sale. If modifications are necessary, contact Mercury MerCruiser about the availability of replacement decals before proceeding.

NOTE: When the CE mark is present in the lower right corner of the Emission Control Information Label on the engine, the Declaration of Conformance applies. Refer to the front page of this manual for further information.

		EMISSION CONTROL INFORMATION	
THIS ENGINE CONFORMS TO XXXX CALIFORNIA EMISSION REGULATIONS FOR SPARK IGNITION MARINE ENGINES REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS			
SERIAL #	XXXXXXXX	D.O.M.	MMM YYYY
FAMILY	XXXXXXXXXXXXXX	DISP	X.XL
STD.	XX.X g/kW-hr		

31656

Emission Control Label—California Emissions—Compliant


"SERIAL#"—Engine Serial Number

"FAMILY"—Engine Family

"STD."—Emissions Standard

"D.O.M."—Date of Manufacture

"DISP"—Piston Displacement

		EMISSION CONTROL INFORMATION	
NOT FOR SALE IN CALIFORNIA			
REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS			
SERIAL #	XXXXXXXX	D.O.M.	MMM YYYY
FAMILY	XXXXXXXXXXXXXX	DISP	X.XL
STD.	XX.X g/kW-hr		

31657

Emission Control Label—Not for Sale in California

"SERIAL#"—Engine Serial Number

"FAMILY"—Engine Family

"STD."—Emissions Standard

"D.O.M."—Date of Manufacture

"DISP"—Piston Displacement

Owner Responsibility

The operator must have routine engine maintenance performed to maintain emission levels within prescribed certification standards.

The operator may not modify the engine in any manner that alters the horsepower or allows emissions levels to exceed their factory specifications.

Emission Certification Star Label


Your boat is labeled on the hull with one of the following star labels. The Symbol for Cleaner Marine Engines Means:





1. Cleaner Air and Water - for a healthier lifestyle and environment.
2. Better Fuel Economy - burns up to 30-40 percent less gas and oil than conventional carbureted two-stroke engines, saving money and resources.
3. Longer Emission Warranty - Protects consumer for worry free operation.

Beginning January 1, 2003, one Three-Star or Four-Star label will be included with each factory-certified Mercury MerCruiser engine.

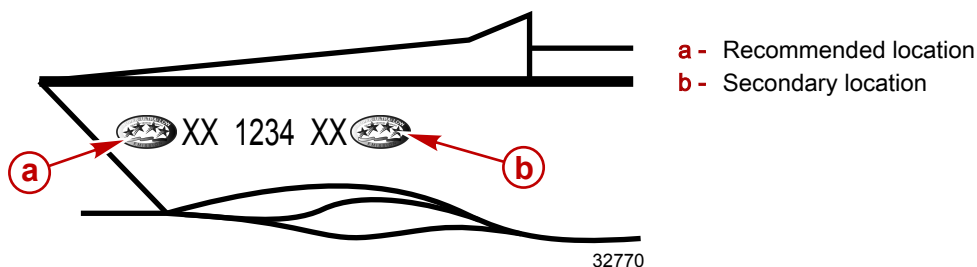All Mercury MerCruiser engines (500 hp and below) will have a Three-Star Ultra Low Emission rating or Four-Star Super Ultra Low Emission rating. The Star label identifies that these engines meet the California Air Resources Board's Sterndrive and Inboard marine engine 2007 and later exhaust emission standards. Engines meeting these standards have 65-90% lower emissions than One-Star – Low Emissions engines.

The Star label will be affixed on the left side of the hull as shown.



One Star - Low emission	
 <p>mc79569-1</p>	<p>The one-star label identifies personal watercraft, outboard, sterndrive and inboard engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2001 exhaust emission standards. Engines meeting these standards have 75% lower emissions than conventional carbureted two-stroke engines. These engines are equivalent to the U.S. EPA's 2006 standards for marine engines.</p>
Two Stars - Very Low emission	
 <p>mc79570-1</p>	<p>The two-star label identifies personal watercraft, outboard, sterndrive and inboard engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2004 exhaust emission standards. Engines meeting these standards have 20% lower emissions than One Star - Low-Emission engines.</p>
Three Stars - Ultra Low emission	
 <p>mc79571-1</p>	<p>The three-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2008 exhaust emission standards or the Sterndrive and Inboard marine engine 2003 exhaust emission standards. Engines meeting these standards have 65% lower emissions than One Star - Low Emission engines.</p>
Four Stars - Super Ultra Low emission	
 <p>mc79572-1</p>	<p>The Four Star label identifies engines that meet the Air Resources Board's Sterndrive and Inboard marine engine 2009 exhaust emission standards. Personal Watercraft and Outboard marine engines may also comply with these standards. Engines meeting these standards have 90% lower emissions than One Star - Low Emission engines.</p>

Section 2 - Getting to Know Your Power Package

Table of Contents


Identification.....	16	Console Mount Features - Single Engine.....	21
Engine Serial Number Decal.....	16	Slim Binnacle Console Mount Features - Single Engine	21
Lanyard Stop Switch.....	16	21
Instrumentation.....	17	Console Mount Features- Dual Engine.....	22
System View.....	17	Synchronizing Dual Engines.....	22
Digital Gauges.....	17	Dual Helm Station Transfer.....	23
Analog Gauges.....	18	Synchronizing Dual Helms Prior To Station	
Remote Controls (Non-DTS Models).....	18	Transfer	23
Remote Controls.....	18	Zero Effort Features.....	24
Panel Mount Features	18	Electrical System Overload Protection.....	24
Console Mount Features	19	Audio Warning System.....	26
Zero Effort Features.....	19	Testing The Audio Warning System	26
Remote Controls (DTS Models).....	20	Engine Guardian Strategy.....	26
Remote Controls.....	20	Transmission Guardian Strategy.....	27
Panel Mount Features.....	20	Warning Horn Signals.....	27

Identification

The serial numbers are the manufacture's keys to numerous engineering details which apply to your MerCruiser power package. When contacting MerCruiser about service, always specify model and serial numbers.

Engine Serial Number Decal

The serial number decal is located on top of the engine.

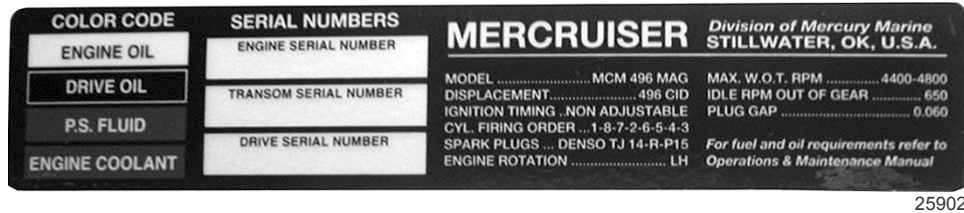


Serial numbers and maintenance color codes decal

The engine serial number is also stamped in the engine block.

Lanyard Stop Switch

The purpose of a lanyard stop switch is to turn off the engine when the operator moves outside the operator's position (as in accidental ejection from the operator's position).

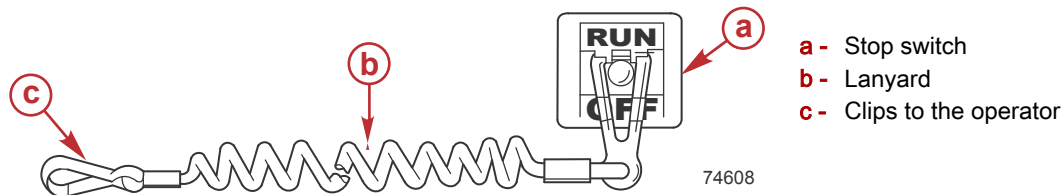

Accidental ejections, such as falling overboard, are more likely to occur in:

- low-sided sport boats
- bass boats
- high performance boats

Accidental ejections can also occur from:

- poor operating practices
- sitting on the seat or gunwale at planing speeds
- standing at planing speeds
- operating at planing speeds in shallow or obstacle infested waters
- releasing your grip on the steering wheel that is pulling in one direction
- consuming alcohol or drugs
- high speed boating maneuvers

The lanyard is a cord usually between 122 and 152 cm (4 and 5 ft) in length when stretched out, with an element on one end made to be inserted into the switch and a snap on the other end for attaching to the operator. The lanyard is coiled to make its at-rest condition as short as possible to minimize the likelihood of lanyard entanglement with nearby objects. Its stretched-out length is made to minimize the likelihood of accidental activation should the operator choose to move around in an area close to the normal operator's position. If it is desired to have a shorter lanyard, wrap the lanyard around the operator's wrist or leg, or tie a knot in the lanyard.

Activation of the lanyard stop switch will stop the engine immediately, but the boat will continue to coast for some distance depending upon the velocity and degree of any turn at shut down. However, the boat will not complete a full circle. While the boat is coasting, it can cause injury to anyone in the boat's path as seriously as the boat would when under power.

We strongly recommend that other occupants be instructed on proper starting and operating procedures should they be required to operate the engine in an emergency (e.g. if the operator is accidentally ejected).

WARNING

If the operator falls out of the boat, stop the engine immediately to reduce the possibility of serious injury or death from being struck by the boat. Always properly connect the operator to the stop switch using a lanyard.

Accidental or unintended activation of the switch during normal operation is also a possibility. This could cause any, or all, of the following potentially hazardous situations:

- Occupants could be thrown forward due to unexpected loss of forward motion, a particular concern for passengers in the front of the boat who could be ejected over the bow and possibly struck by the propulsion or steering components.
- Loss of power and directional control in heavy seas, strong current or high winds.
- Loss of control when docking.

⚠ WARNING

Avoid serious injury or death from deceleration forces resulting from accidental or unintended stop switch activation. The boat operator should never leave the operator's station without first disconnecting the stop switch lanyard from the operator.

Instrumentation

System View

Your power package can connect to the Mercury SC5000 SmartCraft System View, which monitors and reports information ranging from basic operating data to engine alarm data.


The SC5000 System View display instantly provides critical operational information to the boat operator on a clear LCD display. The System View continuously monitors and reports information ranging from basic operating data to detailed vessel environment information. The System View displays water temperature, depth, trim status, boat speed, steering angle, system maintenance reminders, and diagnostics. You can integrate System View with a GPS to provide current location, course, speed, and fuel-to-destination information.

When the system detects a problem with the engine or system, the System View displays alarm messages to alert the operator to the potential problem. If the problem can cause immediate engine damage, the engine's Guardian system responds to the problem by limiting engine power. If using a System View to monitor engine operation, refer to the System View Operation Manual for further explanation of alert messages and instructions on how to proceed. For information on the engine's Guardian system, refer to **Engine Guardian Strategy**, in this manual.

Digital Gauges

A Mercury SmartCraft System instrument package can be purchased for this product. A few of the functions the instrument package will display are engine RPM, coolant temperature, oil pressure (requires a SmartCraft oil pressure sender kit), battery voltage, fuel consumption, and engine operating hours.

SmartCraft digital gauges also feature troll control. This allows a vessel to maintain a constant speed with an engine speed between 500 and 1200 RPM.

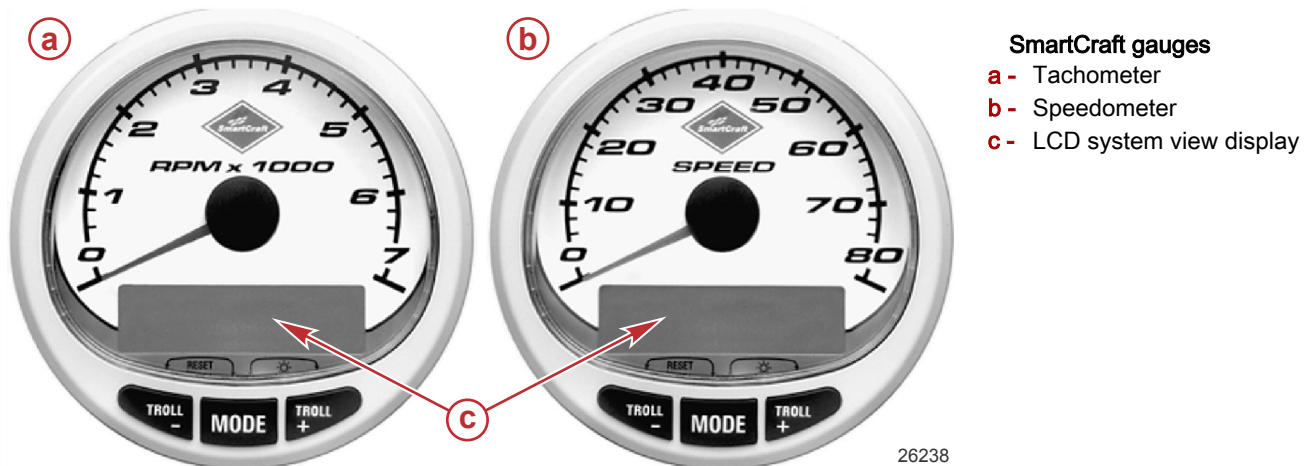


The SmartCraft instrument package also aids in Engine Guardian diagnostics. The SmartCraft Instrument package displays critical engine alarm data and potential problems.

Refer to the manual with your gauge package for the warning functions monitored by and basic operation of the SmartCraft instrument package.

Analog Gauges

The following is a brief explanation of the instrumentation typically found on some boats. The owner/operator should be familiar with all instruments and their functions. Because of the large variety of instrumentation and manufacturers, you should have your boat dealer explain the particular gauges and normal readings for your boat.

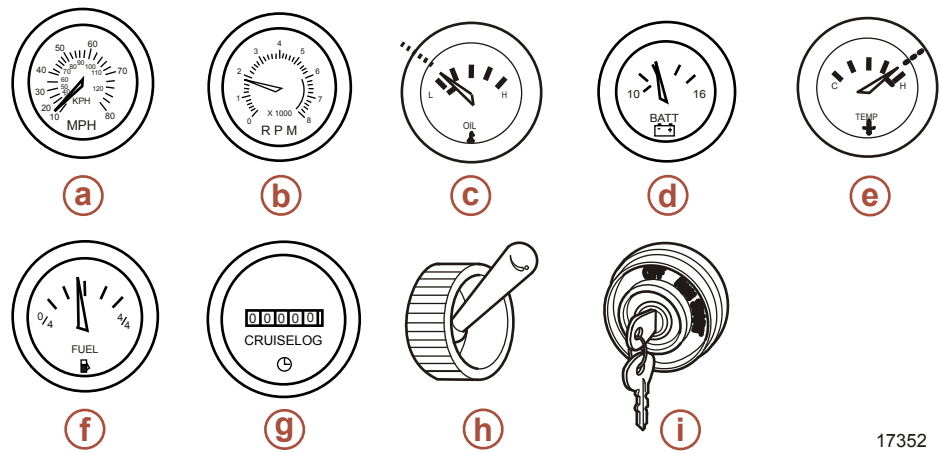

17352


Reference	Gauge	Function
a	Speedometer	Indicates boat speed.
b	Tachometer	Indicates engine RPM.
c	Oil pressure gauge	Indicates engine oil pressure.
d	Voltmeter	Indicates battery voltage.
e	Coolant temperature gauge	Indicates engine operating temperature.
f	Fuel gauge	Indicates quantity of fuel in tank.
g	Hour meter	Records engine operating time.
h	Bilge blower switch	Operates the bilge blower.
i	Ignition switch	Allows the operator to start and stop engine.

Remote Controls (Non-DTS Models)

Remote Controls

Your boat may be equipped with a Mercury Precision Parts or Quicksilver remote controls. All controls may not have all features shown. Consult your dealer for a description and/or demonstration of your remote control.

Panel Mount Features

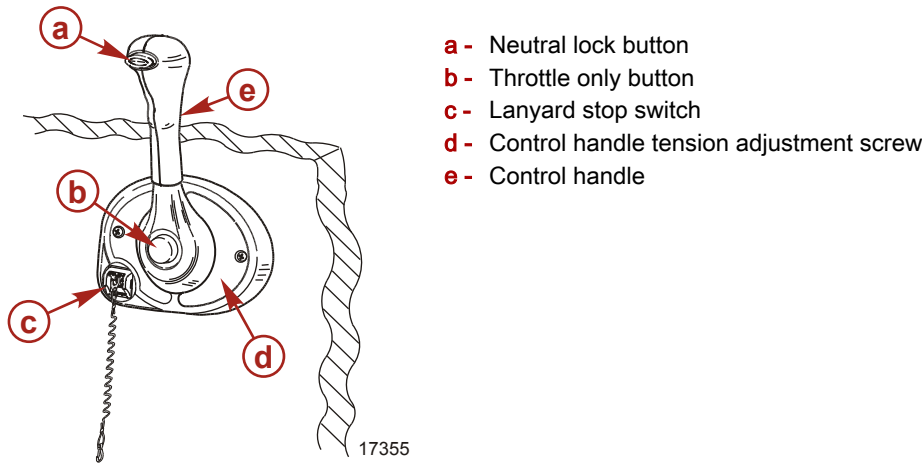

17355

Neutral Lock Button - Prevents accidental shift and throttle engagement. Neutral lock button must be pushed in to move the control handle out of neutral.


Throttle Only Button - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the neutral position, and should only be used to assist in starting the engine.

Lanyard Stop Switch - Turns the ignition off whenever the operator (when attached to the lanyard) moves far enough away from the operator's position to activate the switch. Refer to **Lanyard Stop Switch** for information on the use of this switch.

Control Handle - Operation of the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from neutral with a quick firm motion to the first detent for forward gear. Continue pushing forward to increase speed. Pull the control handle back from neutral with a quick firm motion to the first detent for reverse gear and continue pushing back to increase speed.

Control Handle Tension Adjustment Screw - (not visible) This screw is used to adjust the effort required to move the remote control handle. Refer to instructions provided with remote control for complete adjustment instructions.

Console Mount Features

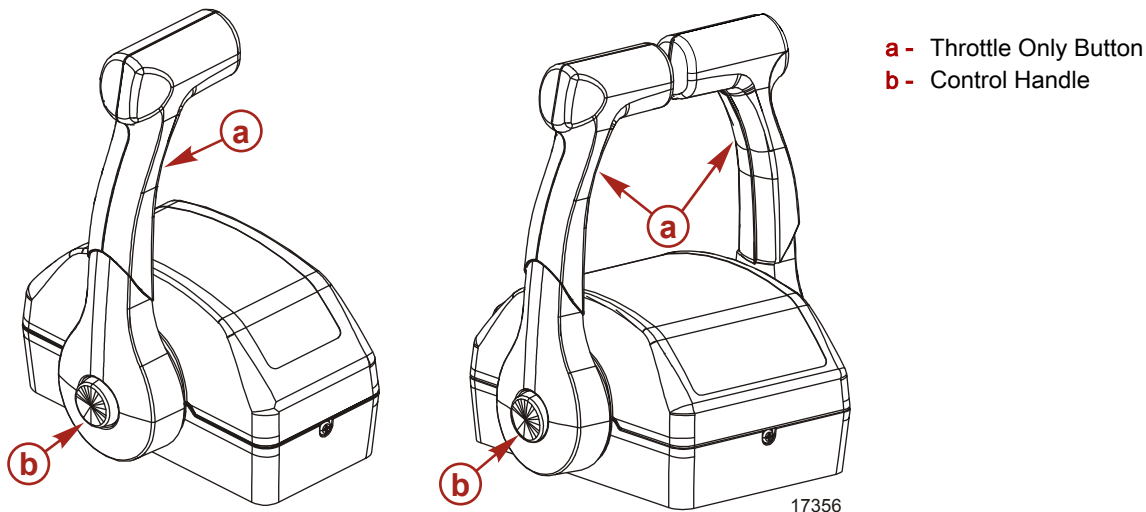


Throttle Only Button - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the neutral position.

Control Handles - Operation of the the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from neutral with a quick firm motion to the first detent for forward gear and continue pushing forward to increase speed. Pull the control handle back from neutral with a quick firm motion to the first detent for reverse gear and continue pushing back to increase speed.

Control Handle Tension Adjustment Screw - (not visible) This screw is used to adjust the effort required to move the remote control handle. Refer to instructions provided with remote control for complete adjustment instructions.

Zero Effort Features

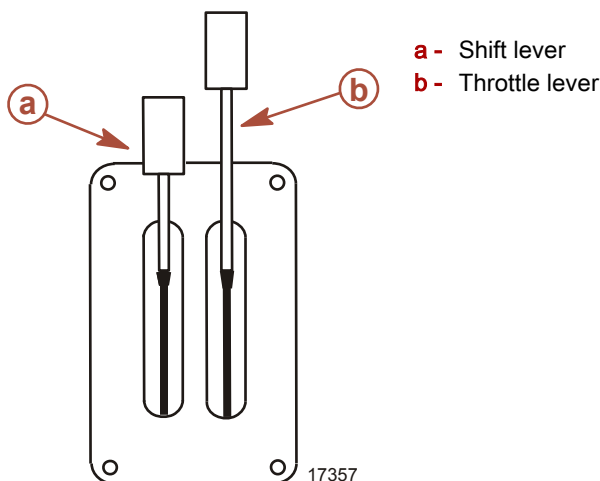

Shift Lever - Shift functions are controlled by the movement of the shift lever. Shift into reverse by moving the shift lever to its aft position. Shift into neutral by moving the shift lever to its center position. Shift into forward by moving the shift lever to its forward position.

Throttle Lever - Throttle functions are controlled by the movement of the throttle lever. Increase the RPM by moving the throttle lever forward. Achieve Wide Open Throttle (WOT) by placing the throttle lever in its full forward position. Decrease RPM by moving the throttle lever back. Achieve minimum RPM (idle) by placing the throttle lever in its full aft position.


Remote Controls (DTS Models)

Remote Controls

IMPORTANT: Your boat must be equipped with a Mercury Marine electronic remote control. Start in gear protection is provided by this control system and prevents the engine from starting when the control is actuated in forward or reverse. Refer to the Mercury Precision Parts/Quicksilver Accessories Guide.

The Digital Throttle and Shift System (DTS) required to operate this engine package provides start and stop functions, throttle control, shift control, start in gear protection, and emergency lanyard stop functions. The DTS system works with specialized helm components such as a command module kit and electronic remote control. Consult your dealer for a description and/or demonstration of your remote control.

Panel Mount Features

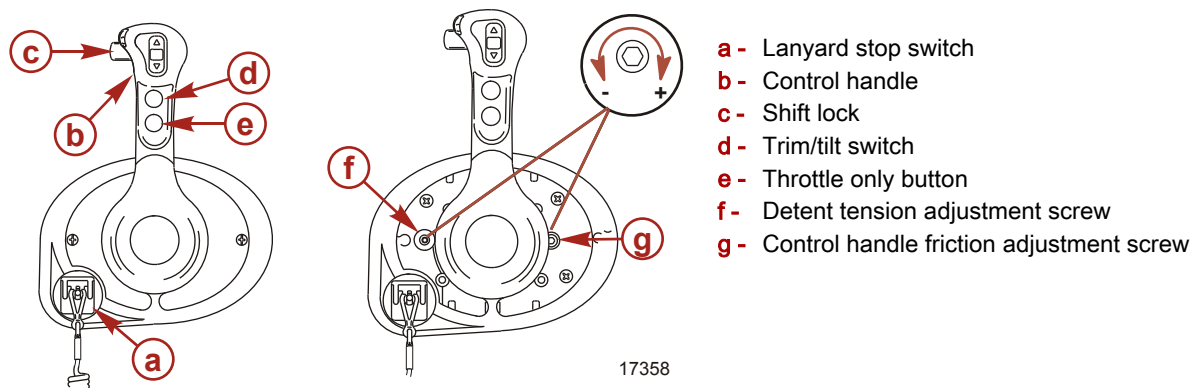

Lanyard Stop Switch - Turns the ignition off whenever the operator (when attached to the lanyard) moves far enough away from the operator's position to activate the switch. Refer to **Lanyard Stop Switch** for information on the use of this switch.

Control Handle - Operation of the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from neutral with a quick, firm motion to the first detent for forward gear. Continue pushing forward to increase speed. Pull the control handle back from neutral with a quick, firm motion to the first detent for reverse gear and continue pushing back to increase speed.

Shift Lock - Pressing the shift lock allows the engine to shift. The shift lock must always be pressed when moving the control handle out of the neutral position.


Throttle Only Button - Allows engine throttle advancement without shifting the engine. The throttle only button can be depressed only when the remote control is in the neutral position, and should only be used to assist in starting or warming up the engine.

Start/Stop Button - Allows the boat operator to start or stop the engine without using the ignition key.

Detent Tension Adjustment Screw - This screw can be adjusted to increase or decrease the effort required to move the control handle out of the detent positions (cover must be removed). Turning the screw clockwise will increase tension.

Control Handle Friction Adjustment Screw - This screw can be adjusted to increase or decrease the tension on the control handle (cover must be removed). This will help prevent unwanted motion of the handle in rough water. Turn the screw clockwise to increase tension and counterclockwise to decrease tension.

Console Mount Features - Single Engine

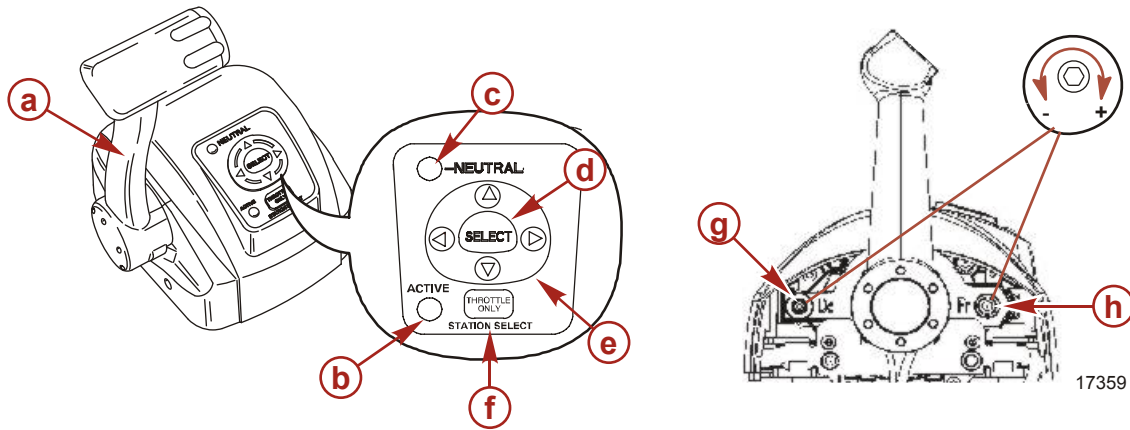

- a** - Control handle
- b** - Active light
- c** - Neutral light
- d** - Select key
- e** - Arrow trackpad
- f** - Throttle only/station select key
- g** - Detent tension adjustment
- h** - Control handle friction adjustment screw

Control Handle - Operation of the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from neutral with a quick, firm motion to the first detent for forward gear. Continue pushing forward to increase speed. Pull the control handle back from neutral with a quick, firm motion to the first detent for reverse gear and continue pushing back to increase speed.

Active Light - The active light is illuminated to show the remote control is active and ready for use.

Neutral Light - The neutral light is illuminated when the engine is in neutral gear position.

Select Key - Selects System View on-screen options and confirms data entries.


Arrow Trackpad - Navigates through System View on-screen function messages.

Throttle Only/Station Select Key - Allows engine throttle advancement without shifting the engine. The throttle only/station select button also allows the boat operator to select which remote control is in control of the engine operation when operating with multiple helms. Refer to **Dual Helm Station Transfer**.

Detent Tension Adjustment Screw - This screw can be adjusted to increase or decrease the effort required to move the control handle out of the detent positions (cover must be removed). Turning the screw clockwise will increase tension.

Control Handle Friction Adjustment Screw - This screw can be adjusted to increase or decrease the tension on the control handle (cover must be removed). This will help prevent unwanted motion of the handle in rough water. Turn the screw clockwise to increase tension and counterclockwise to decrease tension.

Slim Binnacle Console Mount Features - Single Engine

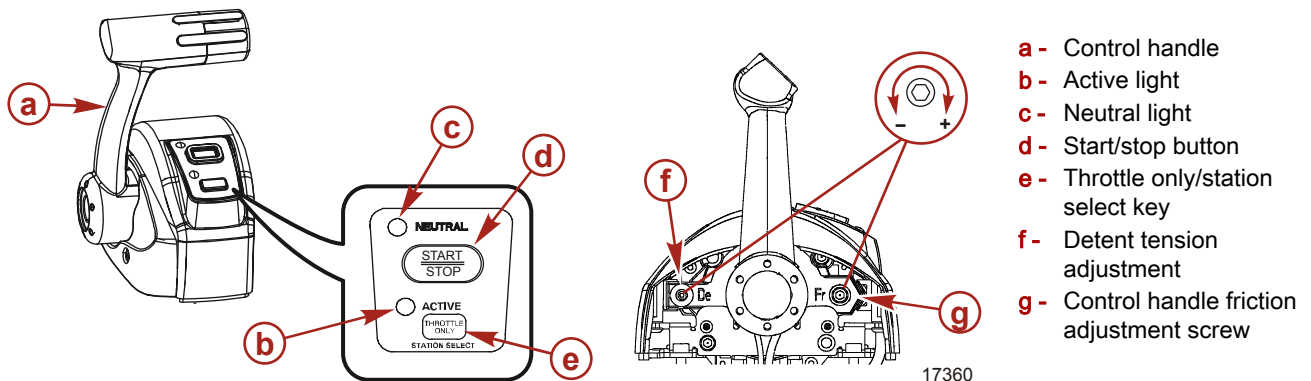

- a** - Control handle
- b** - Active light
- c** - Neutral light
- d** - Start/stop button
- e** - Throttle only/station select key
- f** - Detent tension adjustment
- g** - Control handle friction adjustment screw

Section 2 - Getting to Know Your Power Package

Control Handle - Operation of the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from neutral with a quick, firm motion to the first detent for forward gear. Continue pushing forward to increase speed. Pull the control handle back from neutral with a quick, firm motion to the first detent for reverse gear and continue pushing back to increase speed.

Active Light - The active light is illuminated to show the remote control is active and ready for use.

Neutral Light - The neutral light is illuminated when the engine is in neutral gear position.


Start/Stop Button - Allows the boat operator to start or stop the engine without using the ignition key.

Throttle Only/Station Select Key - Allows engine throttle advancement without shifting the engine. The throttle only/station select button also allows the boat operator to select which remote control is in control of the engine operation when operating with multiple helms. Refer to **Dual Helm Station Transfer**.

Detent Tension Adjustment Screw - This screw can be adjusted to increase or decrease the effort required to move the control handle out of the detent positions (cover must be removed). Turning the screw clockwise will increase tension.

Control Handle Friction Adjustment Screw - This screw can be adjusted to increase or decrease the tension on the control handle (cover must be removed). This will help prevent unwanted motion of the handle in rough water. Turn the screw clockwise to increase tension and counterclockwise to decrease tension.

Console Mount Features- Dual Engine

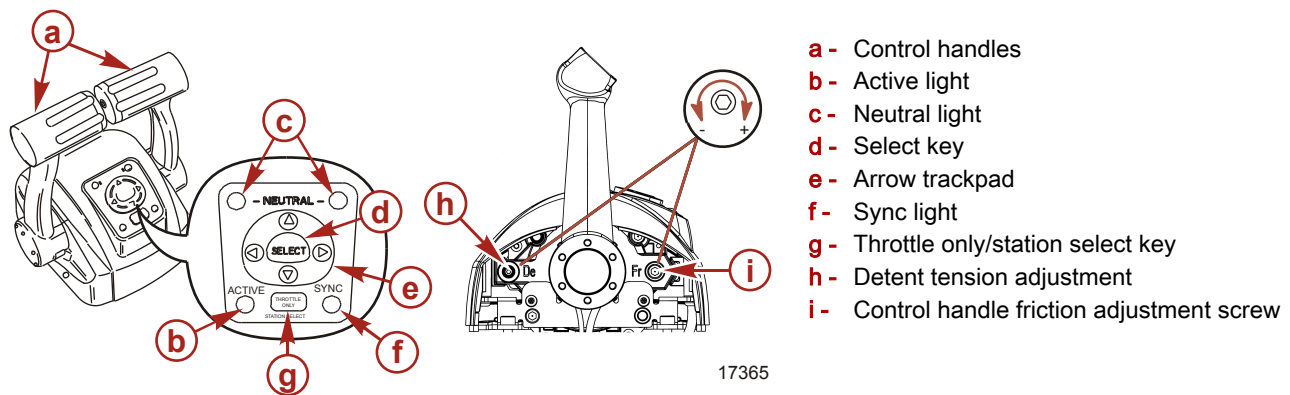

Control Handle - Operation of the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from neutral with a quick, firm motion to the first detent for forward gear. Continue pushing forward to increase speed. Pull the control handle back from neutral with a quick, firm motion to the first detent for reverse gear and continue pushing back to increase speed.

Active Light - The active light is illuminated to show the remote control is active and ready for use.

Neutral Light - The neutral light is illuminated when the engine is in neutral gear position.

Select Key - Selects System View on-screen options and confirms data entries.

Arrow Trackpad - Navigates through System View on-screen function messages.

Sync Light - The sync light is illuminated when the RPM of the two engines are being synchronized by the DTS system.

Throttle Only/Station Select Key - Allows engine throttle advancement without shifting the engine. The throttle only/station select button also allows the boat operator to select which remote control is in control of the engine operation when operating with multiple helms. Refer to **Dual Helm Station Transfer**.

Detent Tension Adjustment Screw - This screw can be adjusted to increase or decrease the effort required to move the control handle out of the detent positions (cover must be removed). Turning the screw clockwise will increase tension.


Control Handle Friction Adjustment Screw - This screw can be adjusted to increase or decrease the tension on the control handle (cover must be removed). This will help prevent unwanted motion of the handle in rough water. Turn the screw clockwise to increase tension and counterclockwise to decrease tension.

Synchronizing Dual Engines

The auto synchronizing feature, when engaged, will automatically adjust the port engine speed to match the speed of the starboard engine.

Synchronizing of engines will automatically engage when the speed of both engines are over 900 RPM for two seconds and remote control handles are positioned within 5° of each other.

Auto Synchronizing will stay engaged up to 95% throttle opening. The Sync light will turn on when the engines are synchronized.

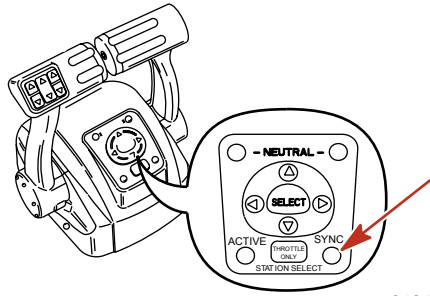

3434

To disengage, move one or both control handles until they are more than 5° apart, reduce engine speed below 900 RPM, or increase engine speed beyond 95%.

Dual Helm Station Transfer

The throttle only/station select button allows the boat operator to select which remote control is in control of the engine operation.

The active light is illuminated at the remote control station that is in control of the engine.


⚠ WARNING

Avoid serious injury or death from loss of boat control. The boat operator should never leave the active station while engine is in gear. Helm transfer should only be attempted while both stations are manned. One-person helm transfer should only be performed while engine is in neutral.

NOTE: Idle position is preferred when doing a station transfer. If conditions do not allow the remote control to be placed at idle position, a station transfer can be done while in gear.

NOTE: Pressing and releasing station select button at new station allows the engine control to be transferred to the new station. The control will automatically start adjusting engine RPM and gear position to match the control handle setting at the new station. Adjust control handles to the desired throttle and gear position.

1. Place active remote control lever to idle position.
2. Proceed to the inactive helm station and position remote control lever to the idle position.
3. Press throttle only/station select button once. The "ACTIVE" light will illuminate to indicate the remote control station is in control of the engine.

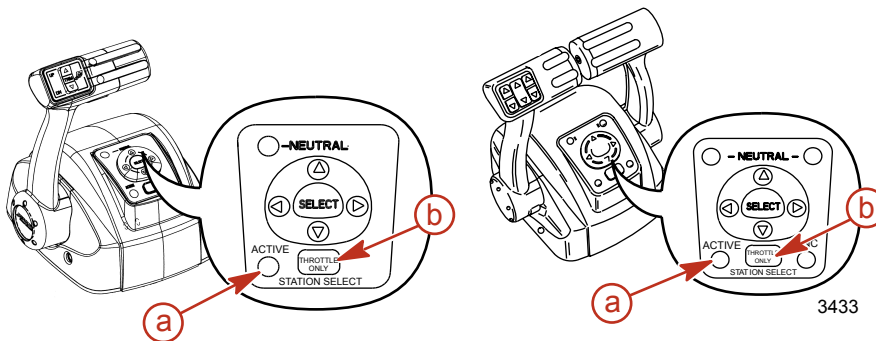

- a - Active light
b - Throttle only/station select button


3433

4. The active light will switch off at the original remote control station.

Synchronizing Dual Helms Prior To Station Transfer

Pressing the station select button and holding it in allows the boat operator 10 seconds to match up the control handle settings at the new station with the handle settings that are at the old (to be inactive) station. If the handles are not matched, the neutral light will flash. The light blinks faster as the handles are nearing match position. Once the light stays on continuously, the handles are matched and the button can be released. Transfer process is complete and the new station is now in control. If the button is held for over 10 seconds, the station transfer is cancelled.

Zero Effort Features

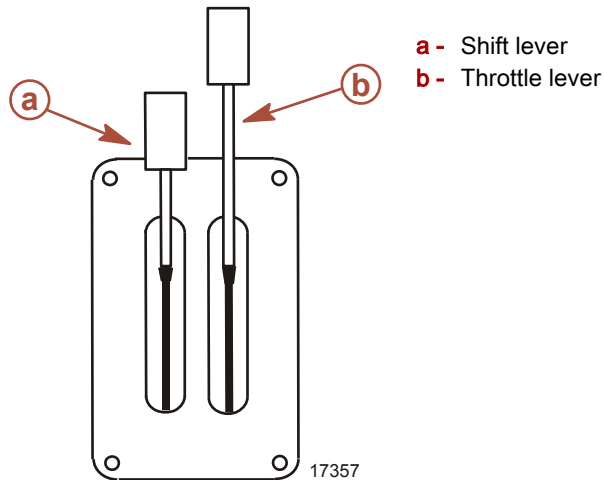

Shift Lever - Shift functions are controlled by the movement of the shift lever. Shift into reverse by moving the shift lever to its aft position. Shift into neutral by moving the shift lever to its center position. Shift into forward by moving the shift lever to its forward position.

Throttle Lever - Throttle functions are controlled by the movement of the throttle lever. Increase the RPM by moving the throttle lever forward. Achieve Wide Open Throttle (WOT) by placing the throttle lever in its full forward position. Decrease RPM by moving the throttle lever back. Achieve minimum RPM (idle) by placing the throttle lever in its full aft position.


Electrical System Overload Protection

An electrical overload will either fail a fuse or trip a circuit breaker. You must find and repair the source of the overload before replacing the fuse or resetting the circuit breaker.

NOTE: In an emergency, when you must operate the engine but cannot isolate the cause for the high current draw, turn off or disconnect all accessories connected to the engine and instrumentation wiring. Reset the circuit breaker. If the breaker remains open, you have not eliminated the electrical overload and the electrical system requires further checks. Contact your authorized Mercury MerCruiser dealer.

The circuit breaker provides protection for the engine wiring harness and the instrumentation power lead. To test or reset the circuit breaker:


1. Remove the engine cover.
2. Push the red test button. A yellow lever appears if the circuit breaker is functioning properly.
3. Reset the breaker by pushing the yellow lever back into the housing.

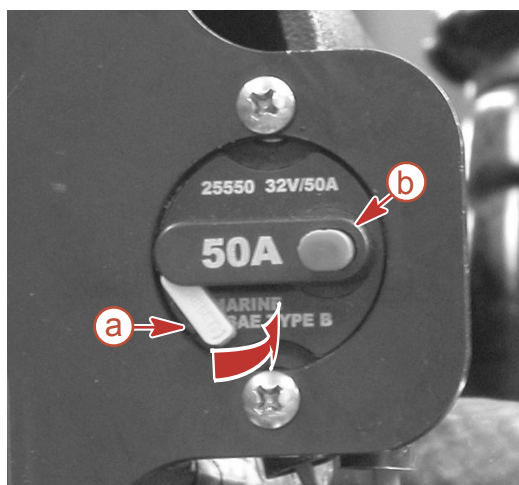

Yellow lever style circuit breaker-typical


- a - Yellow lever-shown tripped
b - Red test button

A 90 amp fuse, located on the large post of the starter solenoid, protects the engine wiring harness if an electrical overload occurs.

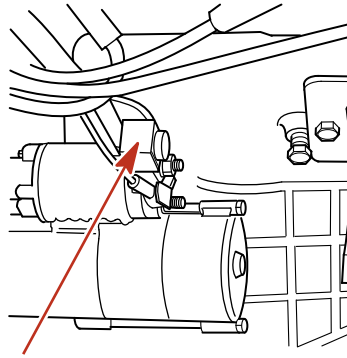

mc74907-1


Four fuses protect the main power, fuel pump, ignition, and accessory circuits. These are located on the top of the engine near the PCM. Four 10 amp fuses protect the O₂ sensors. These are located near the 14-pin harness connector.

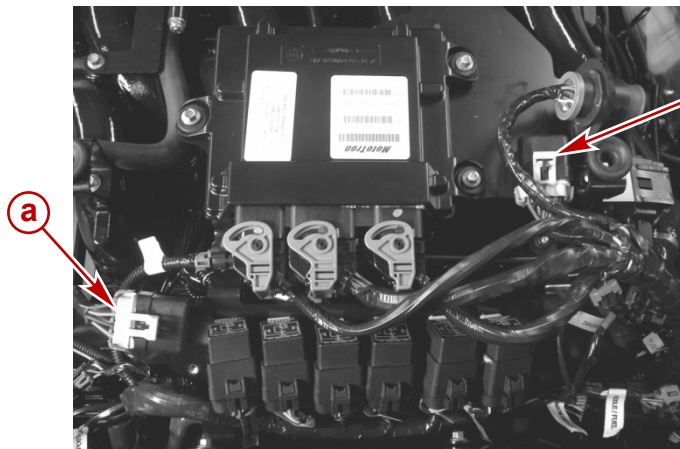

- a** - main power, fuel pump, ignition, and accessory fuses
- b** - O₂ sensor fuses

32646

A 15 amp accessory fuse protects the accessory circuits. This fuse is located on the rear of the engine.

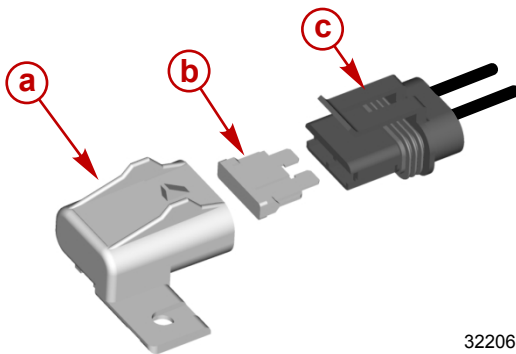


- a** - Fuse cover
- b** - 15 amp fuse
- c** - Accessory harness


32206

Section 2 - Getting to Know Your Power Package

In the ignition switch "I" terminal lead, there may be a 20 amp fuse that protects the electrical system. Check for a failed fuse if you turn the ignition key to the "START" position and nothing happens, assuming the circuit breaker is not tripped.

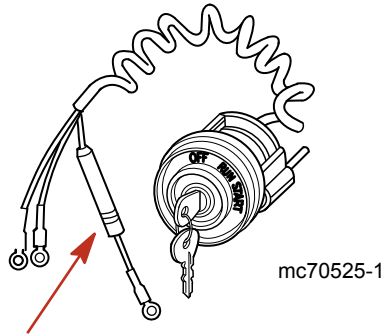

The clean power harness connected to the engine starting battery minimizes voltage drop to the electrical system and is protected by a 5 amp fuse.

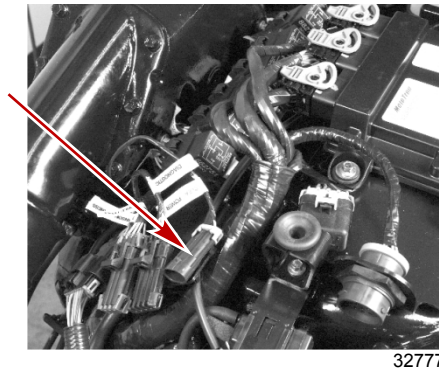

Audio Warning System

Your Mercury MerCruiser power package may be equipped with an Audio Warning System. The Audio Warning System will not protect the engine from damage. It is designed to warn the operator that a problem has occurred.

The audio warning system will sound with a continuous horn if one of the following occurs:

- Engine oil pressure too low
- Engine temperature too hot
- Seawater pressure too low

The audio warning system will sound with an intermittent beeping if the following occurs:

- Transmission fluid temperature too hot
- Transmission pressure too low

NOTICE

A continuous horn indicates a critical fault. Operating the engine during a critical fault can damage components. If the warning horn emits a continuous beep, do not operate the engine unless avoiding a hazardous situation.

If the alarm sounds, stop the engine immediately. Investigate cause and correct it, if possible. If the cause cannot be determined, contact your authorized Mercury MerCruiser dealer.

Testing The Audio Warning System

1. Turn the ignition switch to the "ON" position without cranking the engine.
2. Listen for the audio alarm. The alarm will sound if the system is functioning correctly.

Engine Guardian Strategy

Engine Guardian reduces the potential for engine damage by restricting engine power when the PCM detects a potential problem. Engine Guardian monitors the following:

- Oil pressure

- Coolant temperature
- Seawater pressure
- Engine overspeed
- Exhaust manifold temperature

The Guardian strategy also reduces power to 90% of maximum if any sensor on the power package fails. The PCM stores the fault for diagnostics.

For example, if the water inlet becomes partially blocked, Guardian reduces the available power level of the engine to help prevent damage from decreased water flow to the engine. If the debris passes through, and full water flow is restored, Guardian restores engine power to normal.

Transmission Guardian Strategy

IMPORTANT: Boat speed could be reduced to idle and may not respond to the throttle.

Transmission Guardian is a MerCruiser DTS feature that protects transmissions from clutch damage. Transmission Guardian monitors the clutch pack pressure in forward and reverse gears. If the transmission fluid pressure drops below a predetermined level, Transmission Guardian lowers the engine torque and speed to prevent clutch slippage.

The ECM stores the fault and with this information the technician will be able to rapidly diagnose problems.

Warning Horn Signals

Most faults will cause the warning horn circuit to activate. How the warning horn activates depends on how serious the problem is. There are four warning horn states:

- Caution - horn signal varies with product line and calibration. Minimal guardian.
- Warning - horn signal varies with product line and calibration.
- Severe - horn is beeping constantly.
- Critical - horn is beeping constantly and guardian will be at forced idle.

In addition, depending on the gauge package, there will be warning icons and fault messages on the dash mounted gauges.

Notes:

Section 3 - On the Water

Table of Contents

Safe Boating Suggestions.....	30	Drain Plug and Bilge Pump.....	36
Be Alert to Carbon Monoxide Poisoning.....	31	Protecting People in the Water.....	36
Good Ventilation	31	While You Are Cruising	36
Poor Ventilation	31	While Boat Is Stationary	36
Basic Boat Operation (Non-DTS Models).....	32	High-Speed and High-Performance Operation.....	36
Launching and Boat Operation.....	32	Passenger Safety in Pontoon Boats and Deck Boats.....	36
Operation Chart	32	Boats Having an Open Front Deck	36
Starting and Stopping the Engine.....	32	Boats With Front-Mounted, Raised Pedestal Fishing	
Starting the Engine	32	Seats	37
Stopping the Engine	33	Wave and Wake Jumping.....	37
Throttle-Only Operation.....	33	Impact with Underwater Hazards.....	37
Freezing Temperature Operation.....	33	Conditions Affecting Operation.....	38
Drain Plug and Bilge Pump.....	33	Weight Distribution (Passengers and Gear) Inside the	
Basic Boat Operation (DTS Models).....	33	Boat.....	38
Launching and Boat Operation.....	33	The Bottom of the Boat.....	38
Operation Chart	34	Cavitation.....	38
Starting and Stopping the Engine.....	34	Elevation and Climate.....	38
Starting the Engine	34	Getting Started.....	39
Stopping the Engine	35	20-Hour Break-In Period.....	39
Throttle-Only Operation.....	35	After Break-In Period.....	39
Freezing Temperature Operation.....	36	End of First Season Checkup.....	39

Safe Boating Suggestions

To safely enjoy the waterways, familiarize yourself with local and all other governmental boating regulations and restrictions and consider the following suggestions.

Know and obey all nautical rules and laws of the waterways.

- We recommend that all powerboat operators complete a boating safety course. In the US, the U.S. Coast Guard Auxiliary, the Power Squadron, the Red Cross, and your state or provincial boating law enforcement agency provide courses. For more information in the US, call the Boat U.S. Foundation at 1-800-336-BOAT (2628).

Perform safety checks and required maintenance.

- Follow a regular schedule and ensure that all repairs are properly made.

Check safety equipment on board.

- Here are some suggestions of the types of safety equipment to carry when boating:
 - Approved fire extinguishers
 - Signal devices: flashlight, rockets or flares, flag and whistle or horn
 - Tools necessary for minor repairs
 - Anchor and extra anchor line
 - Manual bilge pump and extra drain plugs
 - Drinking water
 - Transistor radio
 - Paddle or oar
 - Spare propeller, thrust hubs, and an appropriate wrench
 - First aid kit and instructions
 - Water-proof storage containers
 - Spare operating equipment, batteries, bulbs and fuses
 - Compass and map or chart of the area
 - Personal flotation device (1 per person on board)

Watch for signs of weather change and avoid foul weather and rough-sea boating.

Tell someone where you are going and when you expect to return.

Passenger boarding.

- Stop the engine whenever passengers are boarding, unloading or are near the back (stern) of the boat. Shifting the drive unit into neutral is not sufficient.

Use personal flotation devices.

- Federal Law requires that there be a U. S. Coast Guard approved life jacket (personal flotation device), correctly sized and readily accessible for every person on board, plus a throwable cushion or ring. We strongly advise that everyone wear a life jacket at all times while in the boat.

Prepare other boat operators.

- Instruct at least 1 person on board in the basics of starting and operating the engine and boat handling in case the driver becomes disabled or falls overboard.

Do not overload your boat.

- Most boats are rated and certified for maximum load (weight) capacities (refer to your boat capacity plate). Know your boat's operating and loading limitations. Know if your boat will float if full of water. When in doubt, contact your authorized Mercury MerCruiser dealer or the boat manufacturer.

Ensure that everyone in the boat is properly seated.

- Do not allow anyone to sit or ride on any part of the boat that was not intended for such use. This includes the backs of seats, gunwales, transom, bow, decks, raised fishing seats and any rotating fishing seat; anywhere that sudden unexpected acceleration, sudden stopping, unexpected loss of boat control or sudden boat movement could cause a person to be thrown overboard or into the boat. Ensure that all passengers have a proper seat and are in it before any boat movement.

Never be under the influence of alcohol or drugs while boating (it is the law).

- They impair your judgment and greatly reduce your ability to react quickly.

Know your boating area and avoid hazardous locations.

Be alert.

- The operator of the boat is responsible by law to maintain a proper lookout by sight and hearing. The operator must have an unobstructed view particularly to the front. No passengers, load or fishing seats should block the operators view when the boat is above idle or planing transition speed. Watch out for others, the water and your wake.

Never drive your boat directly behind a water skier in case the skier falls.

- As an example, your boat traveling at 40 km/h (25 MPH) will overtake a fallen skier who was 61 m (200 ft.) in front of you in 5 seconds.

Watch fallen skiers.

- When using your boat for water skiing or similar activities, always keep a fallen or down skier on the operator's side of the boat while returning to attend to the skier. The operator should always have the down skier in sight and never back up to the skier or anyone in the water.

Report accidents.

- Boat operators are required by law to file a Boating Accident Report with their state boating law enforcement agency when their boat is involved in certain boating accidents. A boating accident must be reported if 1) there is loss of life or probable loss of life, 2) there is personal injury requiring medical treatment beyond first aid, 3) there is damage to boats or other property where the damage value exceeds \$500.00 or 4) there is complete loss of the boat. Seek further assistance from local law enforcement.

Be Alert to Carbon Monoxide Poisoning

Carbon monoxide is present in the exhaust fumes of all internal combustion engines including the outboards, sterndrives and inboard engines that propel boats, as well as the generators that power various boat accessories. Carbon monoxide is a deadly gas that is odorless, colorless and tasteless.

Early symptoms of carbon monoxide poisoning, which should not be confused with seasickness or intoxication, include headache, dizziness, drowsiness and nausea.

! WARNING

Carbon monoxide poisoning can lead to unconsciousness, brain damage, or death. Keep the boat well ventilated while at rest or underway and avoid prolonged exposure to carbon monoxide.

Good Ventilation

Ventilate the passenger area, open the side curtains or forward hatches to remove fumes.

- Example of desired air flow through the boat.




mc79553-1

Poor Ventilation


Under certain conditions, permanently enclosed or canvas enclosed cabins or cockpits with insufficient ventilation may draw in carbon monoxide. Install one or more carbon monoxide detectors in your boat.

Although the occurrence is rare, on a very calm day, swimmers and passengers in an open area of a stationary boat that contains or is near an operating engine may be exposed to a hazardous level of carbon monoxide.

- Examples of poor ventilation while a boat is stationary:

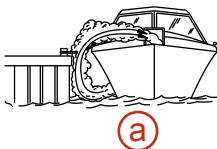

a


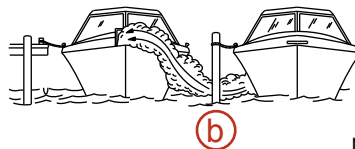


b

mc79554-1

- a - Operating the engine when the boat is moored in a confined space
- b - Mooring close to another boat with its engine operating

2. Examples of poor ventilation while a boat is moving:

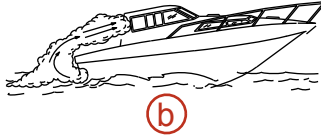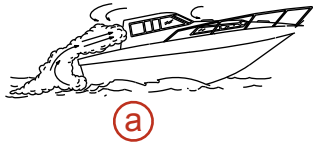

mc79556-1

- a** - Operating the boat with the trim angle of the bow too high
- b** - Operating the boat with no forward hatches open (station wagon effect)

Basic Boat Operation (Non-DTS Models)

Launching and Boat Operation

IMPORTANT: Install bilge drain plug prior to launching boat.

Follow these guidelines when operating your boat to avoid possible water ingestion:

- Do not turn the key off when the engine is above idle speed.
- Do not use the lanyard stop switch to shut off the engine when operating above idle speed.
- Enter the water slowly when launching your boat from a steep ramp.
- Do not shift into reverse while on plane.
- When coming off plane, avoid impact with large waves by applying short, light bursts of power to minimize the wave action against the stern of the boat.
- Do not come off plane quickly and immediately shut of the engine.

Operation Chart

Operation Chart			
BEFORE STARTING	AFTER STARTING	WHILE UNDERWAY	AFTER STOPPING
Install bilge drain plug.	Observe all gauges to check condition of engine. If not normal, stop engine.	Observe all gauges to check condition of engine. If not normal, stop engine.	Turn ignition key to the "OFF" position.
Open engine hatch.	Check for fuel, oil, water, fluid and exhaust leaks.	Listen for the audio alarm.	Turn battery switch to the "OFF" position.
Turn battery switch on.	Check shift and throttle control operation.		Close fuel shut off valve.
Operate bilge blowers.	Check steering operation.		Close seacock, if equipped.
Open fuel shut off valve.			Flush cooling system if in saltwater.
Open seacock, if equipped.			Drain bilge.
Close the drain system.			
Check the engine oil.			
Perform all other checks specified by your dealer and/or boat builder.			
Listen for Audio Warning Alarm to sound when the ignition switch is in the "ON" position.			

Starting and Stopping the Engine

NOTE: Only perform those functions applicable to your power package.

Starting the Engine

1. Check all items listed in the Operation Chart.
2. Place the remote control handle in neutral.

NOTICE

Without sufficient cooling water, the engine, the water pump, and other components will overheat and suffer damage. Provide a sufficient supply of water to the water inlets during operation.

⚠ WARNING

Explosive fumes contained in the engine compartment can cause serious injury or death from fire or explosion. Before starting the engine, operate the bilge blower or vent the engine compartment for at least five minutes.

3. Turn ignition key to "START". Release key when engine starts and allow switch to return to "ON" position. Allow engine to warm up (6-10 minutes on first start of the day).
4. If engine does not start after 3 attempts:
 - a. Push the **throttle only** button and position the remote control handle/throttle lever to the 1/4 throttle position.
 - b. Turn ignition key to "START". Release key when engine starts and allow switch to return to "ON" position.
5. If engine does not start after step 4:
 - a. Move the remote control handle/throttle lever to full throttle position, then return to 1/4 throttle.
 - b. Turn ignition key to "START". Release key when engine starts and allow switch to return to "ON" position.
6. Inspect the power package for fuel, oil, water and exhaust leaks.
7. Move control handle with a firm, quick motion forward to shift to forward gear, or backward to shift to reverse. After shifting, advance throttle to desired setting.

NOTICE

Shifting into gear at engine speeds above idle will damage the drive system. Shift the drive into gear only when the engine is operating at idle.

Stopping the Engine

1. Move the remote control handle to neutral/idle and allow the engine to slow to idle speed. If engine has been operated at high speed for a long period of time, allow the engine to cool at idle speed for 3 to 5 minutes.
2. Turn ignition key to the "OFF" position.

Throttle-Only Operation

1. Refer to **Remote Controls** section for remote control features.
2. Move the control lever to the idle/neutral position.
3. Depress and hold the throttle only button, and move the control lever to the idle/forward or idle/reverse position.
4. Advancing the control lever beyond the idle/forward or idle/reverse position will cause engine speed to increase.
IMPORTANT: Moving the control lever back to the idle/neutral position will disengage the throttle only button and allow the engine to shift into gear.
5. Throttle only mode is deactivated by moving the control lever to the idle/neutral position. Moving the control lever from the idle/neutral position to the idle/forward or idle/reverse position without pressing the throttle only button will shift the unit into the chosen gear.

Freezing Temperature Operation

IMPORTANT: If the boat is operated during periods of freezing temperature, precautions must be taken to prevent freeze damage to the power package. Damage caused by freezing is not covered by Mercury MerCruiser Limited Warranty.

Drain Plug and Bilge Pump

The engine compartment in your boat is a natural place for water to collect. For this reason, boats are normally equipped with a drain plug and/or a bilge pump. It is very important to check these items on a regular basis to ensure that the water level does not come into contact with your power package. Components on your engine will be damaged if submerged. Damage caused by submersion is not covered by the Mercury MerCruiser Limited Warranty.

Basic Boat Operation (DTS Models)

Launching and Boat Operation

IMPORTANT: Install bilge drain plug prior to launching boat.

Follow these guidelines when operating your boat to avoid possible water ingestion:

- Do not turn the key off when the engine is above idle speed.

Section 3 - On the Water

- Do not use the lanyard stop switch to shut off the engine when operating above idle speed.
- Enter the water slowly when launching your boat from a steep ramp.
- Do not shift into reverse while on plane.
- When coming off plane, avoid impact with large waves by applying short, light bursts of power to minimize the wave action against the stern of the boat.
- Do not come off plane quickly and immediately shut off the engine.

Operation Chart

Operation Chart			
BEFORE STARTING	AFTER STARTING	WHILE UNDERWAY	AFTER STOPPING
Install bilge drain plug.	Observe all gauges to check condition of engine. If not normal, stop engine.	Observe all gauges to check condition of engine. If not normal, stop engine.	Turn ignition key to the "OFF" position.
Open engine hatch.	Check for fuel, oil, water, fluid and exhaust leaks.	Listen for the audio alarm.	Turn battery switch to the "OFF" position.
Turn battery switch on.	Check shift and throttle control operation.		Close fuel shut off valve.
Operate bilge blowers.	Check steering operation.		Close seacock, if equipped.
Open fuel shut off valve.			Flush cooling system if in saltwater.
Open seacock, if equipped.			Drain bilge.
Close the drain system.			
Check the engine oil.			
Perform all other checks specified by your dealer and/or boat builder.			
Listen for Audio Warning Alarm to sound when the ignition switch is in the "ON" position.			

Starting and Stopping the Engine

NOTE: Perform only those functions applicable to your power package.

Starting the Engine

1. Check all items listed in the **Operation Chart**.
2. Place the remote control handle in neutral.

NOTICE

Without sufficient cooling water, the engine, the water pump, and other components will overheat and suffer damage. Provide a sufficient supply of water to the water inlets during operation.

⚠ WARNING

Explosive fumes contained in the engine compartment can cause serious injury or death from fire or explosion. Before starting the engine, operate the bilge blower or vent the engine compartment for at least five minutes.

NOTE: MerCruiser DTS models are equipped with SmartStart. The SmartStart feature incorporates push button starting. Rather than holding the start button or key switch to start the engine and then releasing it when the engine starts, SmartStart completely controls the starting process. When the start button is pushed, the DTS system signals the engine PCM to start the engine. If the engine does not start, the starting process times out after eight seconds or when the engine reaches 400 RPM. Attempting to start the engine with the engine already running will turn the engine off.

3. Turn ignition key to "RUN" position.
4. Turn the ignition key switch to the "START" position then release, or depress the start/stop button and release. If the engine is cold, allow the engine to operate at idle for 6-10 minutes or until the engine temperature reaches 60 °C (140 °F).
5. If the engine does not start after three attempts:

- a. Push the throttle-only button and position the remote control handle or throttle lever to the 1/4 throttle position.
 - b. Turn the ignition key to "START." Release key when the engine starts and allow the switch to return to the "ON" position.
6. If the engine does not start after step 5:
 - a. Move the remote control handle/throttle lever to the full throttle position, then return to 1/4 throttle.
 - b. Turn the ignition key to "START." Release key when the engine starts and allow the switch to return to the "ON" position.
7. Inspect the power package for fuel, oil, water, and exhaust leaks.
8. Move the control handle with a firm, quick motion forward to shift to forward gear, or backward to shift to reverse. After shifting, advance throttle to desired setting.

NOTICE

Shifting into gear at engine speeds above idle will damage the drive system. Shift the drive into gear only when the engine is operating at idle.

Stopping the Engine

1. Move the remote control handle to neutral/idle and allow the engine to slow to idle speed. If engine has been operated at high speed for a long period of time, allow the engine to cool at idle speed for 3 to 5 minutes.
2. The engine can be stopped by any one of the following 4 methods:
 - a. Move the ignition key switch to the "ACCESSORY" or "OFF" position. The engine will stop and the control system will be deactivated.
 - b. Depress the start/stop button, if equipped. The engine will stop and the control system will remain active.
 - c. Momentarily move the ignition key switch to the "START" position, then release immediately. The control system will recognize that the engine is running and will stop the engine. The control system will remain active. Moving the ignition key switch to the "START" position again will issue a start request to the control system and the control system will start the engine, if appropriate.
 - d. Activate the lanyard stop switch, if equipped. The engine will stop, but the control system will remain active. The control system will not allow the engine to start if the lanyard stop switch is activated.

Throttle-Only Operation

NOTE: When operating in throttle only (neutral) mode, the DTS Control System will not allow the engine speed to increase above 3500 RPM.

Zero effort remote controls: Zero effort remote controls have separate throttle control and shift control levers. Advancing the throttle control lever beyond the idle position while the shift control lever is in the neutral position will cause engine speed to increase, but only up to the maximum neutral engine speed of 3500 RPM.

! WARNING

The Digital Throttle and Shift (DTS) Zero Effort control can shift the engine or transmission at speeds greater than idle, causing unexpected boat movement, which may result in injury, death, or property damage due to loss of boat control. Always place the throttle control lever in the idle position before moving the shift control lever into forward or reverse gear position.

Panel Mount and Console Mount Remote Controls: Panel mount and console mount remote controls are equipped with a throttle only button. To activate throttle only mode:

1. Refer to **Remote Controls** section for remote control features.
2. Move the control lever to the idle/neutral position.
3. Depress the throttle only button, and move the control lever to the idle/forward or idle/reverse position. The DTS control system will sound two beeps on the audio warning horn to indicate throttle only mode is active. On console mount remote controls, the neutral light will begin to blink.
4. Advancing the control lever beyond the idle/forward or idle/reverse position will cause engine speed to increase.
IMPORTANT: Moving the control lever back to the idle/neutral position will deactivate the throttle only mode and allow the engine to shift into gear.
5. Throttle only mode is deactivated by moving the control lever to the idle/neutral position. Moving the control lever from the idle/neutral position to the idle/forward or idle/reverse position without pressing the throttle only button will shift the unit into the chosen gear.

Freezing Temperature Operation

IMPORTANT: If the boat is operated during periods of freezing temperature, precautions must be taken to prevent freeze damage to the power package. Damage caused by freezing is not covered by Mercury MerCruiser Limited Warranty.

Drain Plug and Bilge Pump

The engine compartment in your boat is a natural place for water to collect. For this reason, boats are normally equipped with a drain plug and/or a bilge pump. It is very important to check these items on a regular basis to ensure that the water level does not come into contact with your power package. Components on your engine will be damaged if submerged. Damage caused by submersion is not covered by the Mercury MerCruiser Limited Warranty.

Protecting People in the Water

While You Are Cruising

It is very difficult for a person in the water to take quick action to avoid a boat heading in their direction, even at slow speeds.



Always slow down and exercise extreme caution any time you are boating in an area where there might be people in the water. Whenever a boat is moving (even coasting) and the gear shift is in neutral, there is sufficient force by the water on the propeller to cause the propeller to rotate. This neutral propeller rotation can cause serious injury.

While Boat Is Stationary

WARNING

A spinning propeller, a moving boat, or any solid device attached to the boat can cause serious injury or death to swimmers. Stop the engine immediately whenever anyone in the water is near your boat.

Shift into neutral and shut off the engine before allowing people to swim or be in the water near your boat.

High-Speed and High-Performance Operation

If your boat is considered a high-speed or high-performance boat with which you are unfamiliar, we recommend that you never operate it at its high speed capability without first requesting an initial orientation and demonstration ride with your dealer or an operator experienced with your boat. For additional information, refer to **Hi-Performance Boat Operation** booklet (90-849250-R2) from your dealer, distributor or Mercury Marine.



Passenger Safety in Pontoon Boats and Deck Boats

Whenever the boat is in motion, observe the location of all passengers. Do not allow any passengers to stand or use seats other than those designated for traveling faster than idle speed. A sudden reduction in boat speed, such as plunging into a large wave or wake, a sudden throttle reduction, or a sharp change of boat direction, could throw them over the front of boat. Falling over the front of the boat between the two pontoons will position them to be run over.

Boats Having an Open Front Deck

No one should ever be on the deck in front of the fence while the boat is in motion. Keep all passengers behind the front fence or enclosure.

Persons on the front deck could easily be thrown overboard or persons dangling their feet over the front edge could get their legs caught by a wave and pulled into the water.

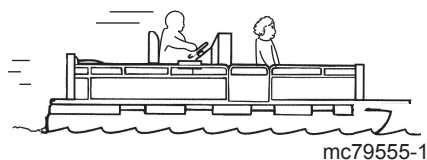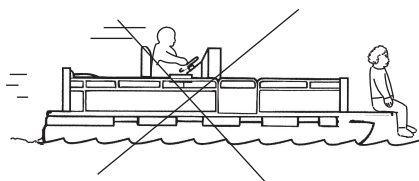



⚠ WARNING

Sitting or standing in an area of the boat not designed for passengers at speeds above idle can cause serious injury or death. Stay back from the front end of deck boats or raised platforms and remain seated while the boat is in motion.


Boats With Front-Mounted, Raised Pedestal Fishing Seats

Elevated fishing seats are not intended for use when the boat is traveling faster than idle or trolling speed. Sit only in seats designated for traveling at faster speeds.

Any unexpected, sudden reduction in boat speed could result in the elevated passenger falling over the front of the boat.

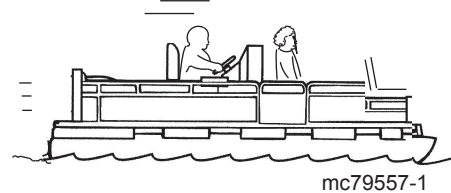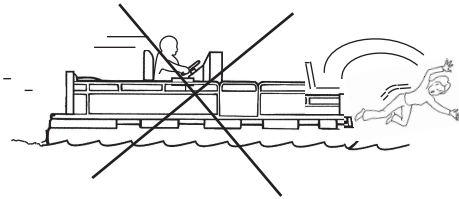**Wave and Wake Jumping****⚠ WARNING**

Wave or wake jumping can cause serious injury or death from occupants being thrown within or out of the boat. Avoid wave or wake jumping whenever possible.

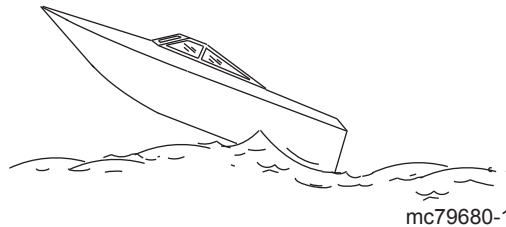


Operating recreational boats over waves and wakes is a natural part of boating. However, when this activity is done with enough speed to force the boat hull partially or completely out of the water, certain hazards arise, particularly when the boat re-enters the water.

The primary concern is the boat changing direction while in the midst of the jump. In such cases the landing may cause the boat to violently veer in a new direction. Such a sharp change in direction or turn can cause occupants to be thrown out of their seats or out of the boat.

There is another less common hazardous result from allowing your boat to launch off of a wave or wake. If the bow of your boat pitches down far enough while airborne, upon water contact it may penetrate under the water surface and submarine for an instant. This will bring the boat nearly to a stop in an instant and can send the occupants flying forward. The boat may also veer sharply to one side.

Impact with Underwater Hazards

Reduce speed and proceed with caution whenever you're driving a boat in shallow water or in areas where the waters are suspected of having underwater obstacles that could be struck by the underwater drive components, rudder or the boat bottom.

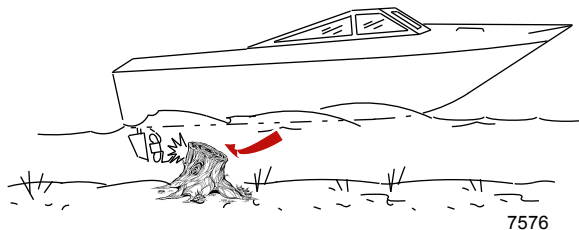

IMPORTANT: The most important thing you can do to help reduce injury or impact damage from striking a floating or underwater object is control the boat speed. Under these conditions, boat speed should be kept to a maximum speed of 24 to 40 km/h (15 to 25 MPH).

Section 3 - On the Water

Striking a floating/underwater object may result in an infinite number of situations. Some of these situations could result in the following:

- The boat could move suddenly in a new direction. Such a sharp change in direction or turn can cause occupants to be thrown out of their seats or out of the boat.
- A rapid reduction in speed. This will cause occupants to be thrown forward, even out of the boat.
- Impact damage to the underwater drive components, rudder and/or boat.

Keep in mind, one of the most important things you can do to help reduce injury or impact damage in these situations is control the boat speed. Boat speed should be kept to a minimum planing speed when driving in waters known to have underwater obstacles.

After striking a submerged object, stop the engine as soon as possible and inspect the drive system for any broken or loose parts. If damage is present or suspected, the power package should be taken to an authorized Mercury MerCruiser dealer for a thorough inspection and necessary repair.

The boat should be checked for hull fractures, transom fractures and water leaks.

Operating with damaged underwater drive components, rudder or boat bottom could cause additional damage to other parts of the power package, or could affect control of the boat. If continued operation is necessary, do so at greatly reduced speeds.

WARNING

Operating a boat or engine with impact damage can result in product damage, serious injury, or death. If the vessel experiences any form of impact, have an authorized Mercury Marine dealer inspect and repair the vessel or power package.

Conditions Affecting Operation

Weight Distribution (Passengers and Gear) Inside the Boat

Shifting weight to rear (stern):

- Generally increases speed and engine RPM
- Causes bow to bounce in choppy water
- Increases danger of following wave splashing into the boat when coming off plane
- At extremes, can cause the boat to porpoise

Shifting weight to front (bow):

- Improves ease of planing
- Improves rough water ride
- At extremes, can cause the boat to veer back and forth (bow steer)

The Bottom of the Boat

To maintain maximum speed, the boat bottom should be:

- Clean, free of barnacles and marine growth
- Free of distortion; nearly flat where it contacts the water
- Straight and smooth, fore and aft

Marine vegetation may accumulate when the boat is docked. This growth must be removed before operation; it may clog the water inlets and cause the engine to overheat.

Cavitation

Cavitation occurs when water flow cannot follow the contour of a fast-moving underwater object, such as a gear housing or a propeller. Cavitation increases propeller speed while reducing boat speed. Cavitation can seriously erode the surface of the gear housing or the propeller. Common causes of cavitation are:

- Weeds or other debris snagged on the propeller
- Bent propeller blade
- Raised burrs or sharp edges on the propeller

Elevation and Climate

Elevation and climate changes will affect the performance of your power package. Loss of performance can be caused by:

- Higher elevations
- Higher temperatures
- Low barometric pressures

- High humidity

For you to have optimum engine performance under changing weather conditions, it is essential that the engine be propped to allow the engine to operate at or near the top end of the specified maximum RPM range with a normal boat load during your normal boating weather conditions.

In most cases, recommended RPM can be achieved by changing to a lower pitch propeller.

Getting Started

20-Hour Break-In Period

IMPORTANT: The first 20 hours of operation is the engine break-in period. Correct break-in is essential to obtain minimum oil consumption and maximum engine performance. During this break-in period, the following rules must be observed:

- Do not operate below 1500 RPM for extended periods of time for the first 10 hours. Shift into gear as soon as possible after starting and advance the throttle above 1500 rpm **if conditions permit safe operation**.
- Do not operate at one speed consistently for extended periods.
- Do not exceed 3/4 throttle during the first 10 hours. During the next 10 hours, occasional operation at full throttle is permissible (5 minutes at a time maximum).
- Avoid full throttle acceleration from idle speed.
- Do not operate at full throttle until the engine reaches normal operating temperature.
- Frequently check engine oil level. Add oil as needed. It is normal for oil consumption to be high during the break-in period.

After Break-In Period

To help extend the life of your Mercury MerCruiser power package, follow these recommendations:

- Ensure that propeller allows the engine to operate at or near the top of the specified WOT RPM range. Refer to **Specifications** and **Maintenance**.
- Operate the engine at 3/4 throttle or lower. Refrain from prolonged operation at wide-open-throttle RPM.
- Change the engine oil and oil filter. Refer to **Maintenance**.
- Change the transmission oil and filter. Refer to **Maintenance** (ZF Transmission models).¹

End of First Season Checkup

At the end of the first season of operation, contact an authorized Mercury MerCruiser dealer to discuss and/or perform scheduled maintenance items. If you are in an area where the product is operated continuously, year-round, you should contact your dealer at the end of the first 100 hours of operation or once yearly, whichever occurs first.

1. Require fluid and filter change after the first 25 hours and then every 100 hours.

Notes:

Section 4 - Specifications

Table of Contents

Cruising RPM.....	42	Engine Oil.....	43
Fuel Requirements.....	42	Enging Specifications.....	43
Fuel Ratings	42	Horizon 8.1 and 8.1 HO with Emissions Control.....	43
Using Reformulated (Oxygenated) Gasoline (USA Only)	42	Fluid Specifications.....	44
.....	42	Engine.....	44
Gasoline Containing Alcohol	42	Transmission.....	44

Cruising RPM

Material and design advancements allow modern inboard engines operate at higher engine speeds than their predecessors. Increased RPM significantly increases the horsepower of these new engines and is a critical part performance and efficiency. The materials and design of the new engines allow these higher speeds without durability penalty. Over-propping the boat to reduce its cruising RPM to previous levels increases the engine's susceptibility to engine damage from detonation and pre-ignition. The recommended cruising RPM ranges are:

Cruising RPM for peak efficiency	
Model	RPM range
Horizon 8.1	3200–3600
8.1 H.O.	3400–3800

Fuel Requirements

NOTICE

Running out of fuel can damage catalyst components. Do not allow the fuel tanks to become empty during operation.

IMPORTANT: Use of improper gasoline can damage your engine. Engine damage resulting from the use of improper gasoline is considered misuse of the engine and will not be covered under the limited warranty.

Fuel Ratings

Mercury MerCruiser engines will operate satisfactorily with any major brand of unleaded gasoline that meets the following specifications:

USA and Canada - A posted pump Octane Rating of 87 (R+M)/2, minimum. Premium gasoline 92 (R+M)/2 Octane is also acceptable. Do not use leaded gasoline.

Outside USA and Canada - A posted pump Octane Rating of 91 RON, minimum. Premium gasoline (98 RON) is also acceptable. If unleaded gasoline is not available, use a major brand of leaded gasoline.

Using Reformulated (Oxygenated) Gasoline (USA Only)

Reformulated gasoline is required in certain areas of the USA and is acceptable for use in your Mercury MerCruiser engine. The two types of oxygenates used in these fuels are alcohol (ethanol) and ether (MTBE or ETBE). If ethanol is the oxygenate that is used in the gasoline in your area, refer to **Gasoline Containing Alcohol**.

Gasoline Containing Alcohol

If the gasoline in your area contains either methanol (methyl alcohol) or ethanol (ethyl alcohol), be aware of possible adverse effects. These adverse effects are more severe with methanol and worsen according to the percentage of alcohol in the fuel. Alcohol in gasoline can absorb moisture from the air, causing the water and the alcohol to separate from the gasoline in the fuel tank.

IMPORTANT: The fuel system components on your Mercury MerCruiser engine will withstand up to 10% alcohol content in the gasoline. We do not know what percentage your boat's fuel system will withstand. Contact your boat manufacturer for specific recommendations on your boat's fuel system components (fuel tanks, fuel lines, and fittings).

Be aware that gasoline containing alcohol may cause increased:

- Corrosion of metal parts
- Deterioration of rubber or plastic parts
- Fuel permeation through the rubber fuel lines
- Starting and operating difficulties

⚠ WARNING

Fuel leakage is a fire or explosion hazard, which can cause serious injury or death. Periodically inspect all fuel system components for leaks, softening, hardening, swelling, or corrosion, particularly after storage. Any sign of leakage or deterioration requires replacement before further engine operation.

IMPORTANT: If you use gasoline that contains or might contain alcohol, you must increase the frequency of inspection for leaks and abnormalities.

IMPORTANT: When operating a Mercury MerCruiser engine on gasoline containing alcohol, do not store the gasoline in the fuel tank for long periods. Cars normally consume alcohol-blend fuels before they can absorb enough moisture to cause trouble, boats often sit idle long enough for phase separation to take place. Internal corrosion may take place during storage if alcohol has washed protective oil films from internal components.

Engine Oil

For optimum engine performance and maximum protection, use the following oil:


Application	Recommended Oil
All MerCruiser engines	Mercury MerCruiser Full-Synthetic Engine Oil, 20W-40, NMMA FC-W rated

IMPORTANT: Lubrication requirements for catalyzed engines differ from the requirements for noncatalyzed engines. Some marine-grade lubricants contain high levels of phosphorus, which can damage the catalyst system on MerCruiser engines. Although these high-phosphorus lubricants may allow acceptable engine performance, exposure over time will damage the catalyst. Catalysts damaged by lubricants containing high levels of phosphorus may not be covered by the MerCruiser Limited Warranty.

If Mercury MerCruiser Full-Synthetic Engine Oil, 20W-40 oil is unavailable, use the following lubricants, listed in order of recommendation. If you are servicing a catalyst engine, use these for short periods of time only.

1. Mercury/Quicksilver 25W-40 Synthetic Blend, NMMA FC-W-rated 4-cycle MerCruiser oil
2. Mercury/Quicksilver 25W-40, NMMA FC-W-rated 4-cycle MerCruiser oil
3. Other recognized brands of NMMA FC-W-rated 4-cycle oils
4. A good-grade, straight-weight detergent automotive oil according to the last row of the operating chart below

NOTE: We do not recommend nondetergent oils, multi-viscosity oils (other than as specified), non FC-W-rated synthetic oils, low-quality oils, or oils that contain solid additives.

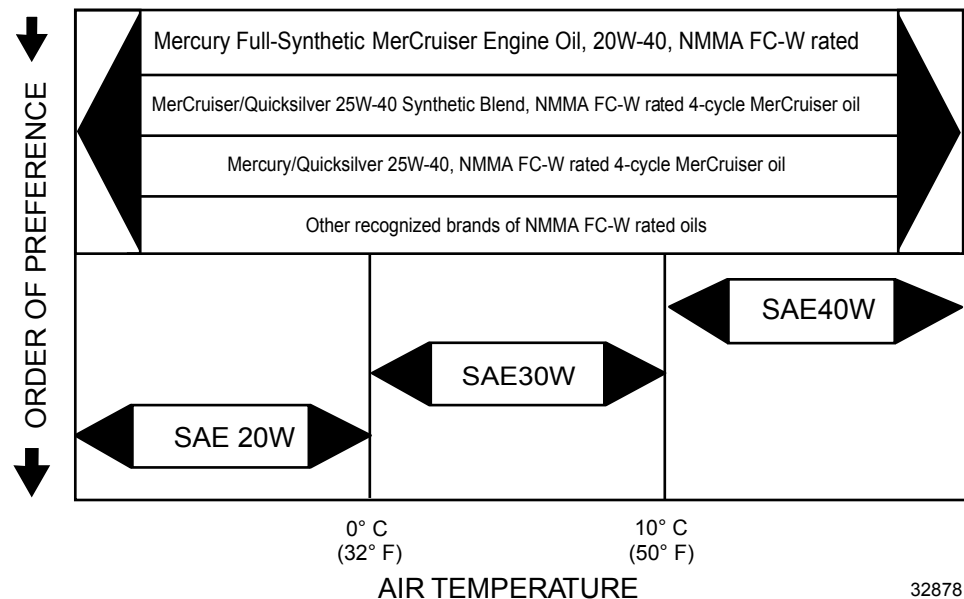

Enging Specifications

Horizon 8.1 and 8.1 HO with Emissions Control

NOTE: Performance specifications are obtained and corrected in accordance with SAE J1228/ISO 8665 Crankshaft Power. All measurements are taken with the engine at normal operating temperature. RPM range is measured using an accurate service tachometer with the engine at normal operating temperatures. Oil pressure must be checked with the engine at normal operating temperature.

NOTE: Oil pressure specifications are for reference and may vary.

Section 4 - Specifications

		Horizon 8.1	8.1 HO
Propshaft power		276 kW (370 hp)	313 kW (420 hp)
Displacement		8.1 L (496 cid)	
Alternator amperage	Hot	72 A	
	Cold	65 A	
RPM	WOT	4200–4600	4400–4800
	Rev limiter	4750	4950
Idle RPM	Mechanical	675	
	DTS		
Minimum oil pressure	At 2000 RPM	431 kPa (60 psi)	
	At idle	207 kPa (30 psi)	
Thermostat	MPI models with closed cooling	71° C (160° F)	
Timing at idle		Not Adjustable	
Firing order		1-8-7-2-6-5-4-3	
Minimum battery rating	Non-DTS models	750 CCA, 950 MCA, 180 Ah	
	DTS models	800 CCA, 1000 MCA, 190 Ah	
Spark plug type		AC Platinum (AC 41-983)	
Spark plug gap		1.5 mm (0.060 in.)	
Emission Control System		Catalyst	

Fluid Specifications

Engine

IMPORTANT: All capacities are approximate fluid measures.

All Models	Capacity	Fluid Type
Engine oil (with filter)	8.5 L (9 US qt)	Mercury Full-Synthetic MerCruiser Engine Oil 20W-40
Seawater cooling system (winterization use only)	20 L (21 US qt)	Propylene glycol and purified water
Closed cooling system	18 L (19 US qt)	Mercury Extended Life Coolant Antifreeze or extended life ethylene glycol 5/100 antifreeze mixed 50/50 with purified water

Transmission

Model	Capacity	Fluid Type
500A	2.84 L (3.00 US qt)	Dexron III Automatic Transmission Fluid
5000V	3.30 L (3.5 US qt)	
63A	4.00 L (4.5 US qt)	
63V	4.00 L (4.5 US qt)	
80A	5.50 L (6 US qt)	

Section 5 - Maintenance

Table of Contents

Owner/Operator Responsibilities.....	46	Filling the Closed Cooling System.....	52
Dealer Responsibilities.....	46	Draining.....	53
Maintenance.....	46	Cleaning.....	53
Do-It-Yourself Maintenance Suggestions.....	46	Battery.....	53
Inspection.....	47	Multiple EFI Engine Battery Precautions.....	53
Maintenance Schedule—Inboard Models.....	47	Cleaning the Flame Arrestor.....	54
Routine Maintenance.....	47	Cleaning the IAC Muffler (Non-DTS Models Only).....	54
Scheduled Maintenance.....	47	Water-Separating Fuel Filter.....	55
Maintenance Log.....	48	GEN III Models.....	56
Engine Oil.....	49	Removal	56
Checking.....	49	Installation	56
Filling.....	49	Lubrication.....	57
Changing Oil and Filter.....	50	Throttle Cable.....	57
Engine Oil Drain Pump.....	50	Shift Cable - Typical.....	57
Changing the Oil Filter.....	50	Engine Coupler.....	58
Transmission Fluid.....	51	Driveshaft Extension Models.....	58
Checking While the Engine is Warm	51	Serpentine Drive Belt.....	59
Checking While Engine is Cold	51	Belt Routing.....	59
Changing	51	Checking.....	59
Closed Cooling System.....	51	Replacing.....	59
Coolant Requirement.....	51	Flushing the Seawater System—Inboard Models.....	60
Checking Coolant Level.....	51	The Boat Out of the Water—Inboard Models.....	60
.....	51	The Boat in the Water—Inboard Models.....	61

Owner/Operator Responsibilities

It is the operator's responsibility to perform all safety checks, to ensure that all lubrication and maintenance instructions are complied with for safe operation and to return the unit to an authorized Mercury MerCruiser dealer for a periodic checkup.

Normal maintenance service and replacement parts are the responsibility of the owner/operator and as such, are not considered defects in workmanship or material within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of your power package will ensure optimum performance and dependability and will keep your overall operating expenses at a minimum. See your authorized Mercury MerCruiser dealer for service aids.

Dealer Responsibilities

In general, a dealer's responsibilities to the customer include predelivery inspection and preparation such as:

- Ensure that the boat is properly equipped.
- Prior to delivery, make certain that the Mercury MerCruiser power package and other equipment are in proper operating condition.
- Make all necessary adjustments for maximum efficiency.
- Familiarize the customer with the on-board equipment.
- Explain and demonstrate the operation of the power package and boat.
- Provide you with a copy of a Predelivery Inspection Checklist.
- Your selling dealer should fill out the Warranty Registration Card completely and mail it to the factory immediately upon sale of the new product.

Maintenance

WARNING

Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected engine starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing engine or drive components.

WARNING

Fuel vapors trapped in the engine compartment may be an irritant, cause difficulty breathing, or may ignite resulting in a fire or explosion. Always ventilate the engine compartment before servicing the power package.

IMPORTANT: Refer to the maintenance schedule for the complete listing of all scheduled maintenance to be performed. Some items should be performed only by an authorized Mercury MerCruiser dealer only. Before attempting maintenance or repair procedures not covered in this manual, we recommend that you purchase a Mercury MerCruiser service manual and read it thoroughly.

NOTE: Maintenance points are color-coded for ease of identification.

Maintenance Point Color Codes	
Yellow	Engine oil
Black	Drive lube
Brown	Power steering fluid
Blue	Raw water flush

Do-It-Yourself Maintenance Suggestions

Present day marine equipment, such as your Mercury MerCruiser power package, are highly technical pieces of machinery. Electronic ignition and special fuel delivery systems provide greater fuel economies, but also are more complex for the untrained mechanic.

If you are one of those persons who likes to do it yourself, here are some suggestions for you.

- Do not attempt any repairs unless you are aware of the Cautions, Warnings and procedures required. Your safety is our concern.
- If you attempt to service the product yourself, we suggest you order the service manual for that model. The service manual outlines the correct procedures to follow. It is written for the trained mechanic, so there may be procedures you don't understand. Do not attempt repairs if you do not understand the procedures.

- There are special tools and equipment that are required to perform some repairs. Do not attempt these repairs unless you have these special tools and/or equipment. You can cause damage to the product in excess of the cost a dealer would charge you.
- Also, if you partially disassemble an engine or drive assembly and are unable to repair it, the dealer's mechanic must reassemble the components and test to determine the problem. This will cost you more than taking it to the dealer immediately upon having a problem. It may be a very simple adjustment to correct the problem.
- Do not telephone the dealer, service office or the factory to attempt for them to diagnose a problem or to request the repair procedure. It is difficult for them to diagnose a problem over the telephone.

Your authorized dealer is there to service your power package. They have qualified factory trained mechanics.

It is recommended you have the dealer do periodic maintenance checks on your power package. Have them winterize it in the fall and service it before the boating season. This will reduce the possibility of any problems occurring during your boating season when you want trouble free boating pleasure.

Inspection

Inspect your power package often, and at regular intervals, to help maintain its top operating performance and correct potential problems before they occur. The entire power package should be checked carefully, including all accessible engine parts.

- Check for loose, damaged or missing parts, hoses and clamps; tighten or replace as necessary.
- Check plug leads and electrical leads for damage.
- Remove and inspect the propeller. If badly nicked, bent or cracked, contact your authorized Mercury MerCruiser dealer.
- Repair nicks and corrosion damage on power package exterior finish. Contact your authorized Mercury MerCruiser dealer.

Maintenance Schedule—Inboard Models

Routine Maintenance

NOTE: Only perform maintenance that applies to your particular power package.

Task Interval	Maintenance to Be Performed
Each day start	<ul style="list-style-type: none"> • Check the engine oil level. You can extend this interval based on experience with the product. • Check the transmission fluid level.
Each day end	<ul style="list-style-type: none"> • If operating in saltwater, brackish water, or polluted water, flush the seawater section of the cooling system after each use.
Weekly	<ul style="list-style-type: none"> • Check the water inlets for debris or marine growth. • Check and clean the seawater strainer, if equipped. • Check the coolant level. • Check the transmission fluid.
Every two months or 50 hours	<ul style="list-style-type: none"> • If operating in saltwater, brackish water, or polluted water, apply Corrosion Guard to the power package. • Check the battery connections and the fluid level. • Ensure that the gauges and the wiring connections are secure. Clean the gauges. If operating in saltwater, reduce this interval to every 25 hours or 30 days, whichever occurs first.

Scheduled Maintenance

NOTE: Only perform maintenance that applies to your particular power package.

Task Interval	Maintenance to Be Performed
After the initial 20-hour break-in period	Change the engine oil and filter. <ul style="list-style-type: none"> • Change the engine oil and filter. • Change the transmission fluid and filter. ZF Marine requires changing the transmission fluid and filter to maintain warranty.

Date	Maintenance Performed	Engine Hours

Engine Oil


Checking

NOTICE

Discharge of oil, coolant, or other engine/drive fluids into the environment is restricted by law. Use caution not to spill oil, coolant, or other fluids into the environment when using or servicing your boat. Be aware of the local restrictions governing the disposal or recycling of waste, and contain and dispose of fluids as required.

1. Stop the engine. Allow the oil to drain into the oil pan for approximately five minutes with the boat at rest in the water.
2. Remove the dipstick, wipe clean, and reinstall fully into the dipstick tube. Wait 60 seconds to allow trapped air to vent.

NOTE: Install the dipstick with oil level indication marks facing the rear of the engine (flywheel end).

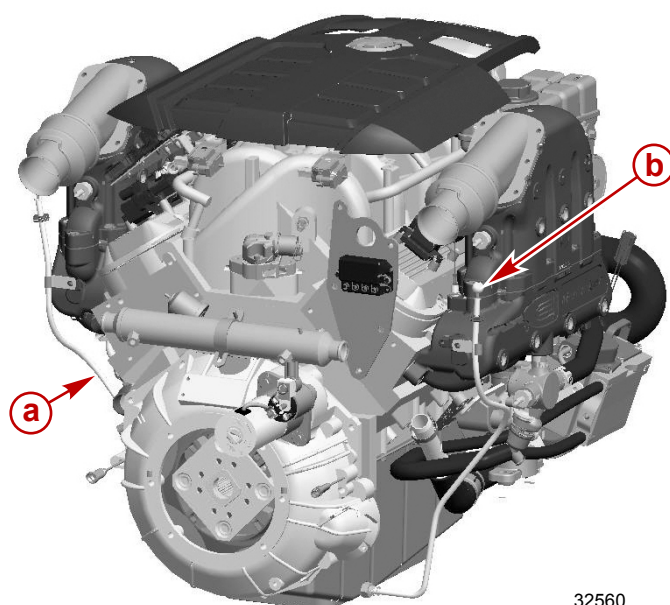

- a - Dipstick option 1
- b - Dipstick option 2


32560

3. Inspect the dipstick reading, which should indicate a level between the full or "OK" mark and the "ADD" mark. Reinstall the dipstick into the dipstick tube. If the oil level is low, refer to **Filling**.

Filling

IMPORTANT: Always use the dipstick to determine the exact quantity of oil or fluid required. Do not overfill the engine with oil.

1. Remove oil fill cap.

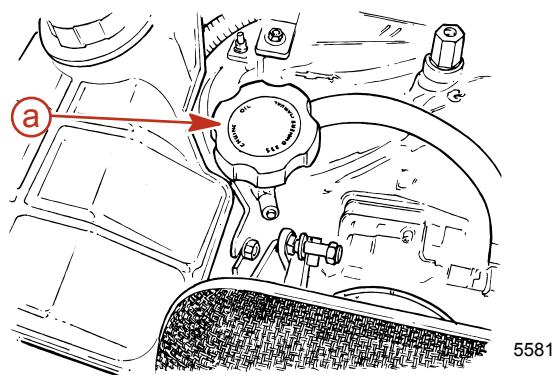

- a - Oil fill cap

5581

Section 5 - Maintenance

2. Add the specified engine oil to bring the level up to, but not over, the full or OK range mark on the dipstick.

All Models	Capacity	Fluid Type
Engine oil (with filter)	8.5 L (9 US qt)	Mercury Full-Synthetic MerCruiser Engine Oil 20W-40

3. Check the oil level and replace the fill cap.


Changing Oil and Filter

See **Maintenance Schedule** for the change interval. Engine oil should be changed before placing the boat in storage.

IMPORTANT: Change engine oil when the engine is warm from operation. Warm oil flows more freely, carrying away more impurities. Use only recommended engine oil (refer to the Specifications section).

Engine Oil Drain Pump


1. Loosen the oil filter to vent the system.
2. Remove the dipstick.
3. Install the oil pump onto the dipstick tube.

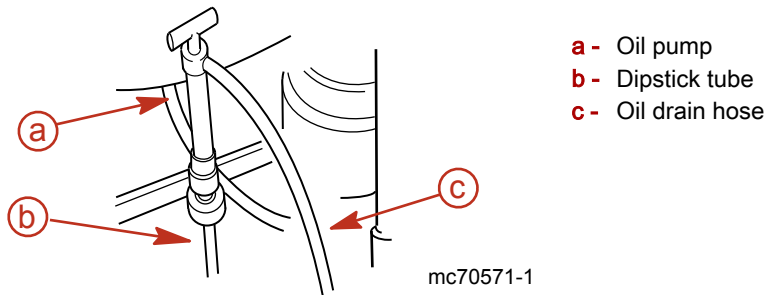

4. Insert the hose end of the crankcase oil pump onto an appropriate container and use the handle to pump until the crankcase is empty.
5. Remove the pump.
6. Install the dipstick.

Changing the Oil Filter

1. Remove and discard oil filter.

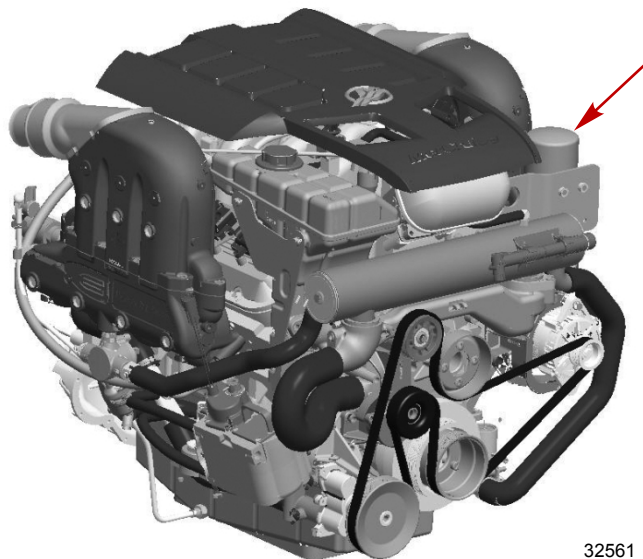

2. Coat the sealing ring on the new filter with engine oil.
3. Install and tighten the oil filter securely following the filter manufacturer's instructions. Do not overtighten.
4. Remove oil fill cap.
5. Use the dipstick to determine the amount of engine oil required. Replace the dipstick.
6. Add the required amount of the recommended oil to bring the level up to the bottom of the OK range on the dipstick.

7. With the boat at rest in the water, repeat steps 5 and 6 if necessary.

NOTE: Adding 0.95 L (1 US qt) of engine oil raises the level from the add mark to the top of the OK range.

All Models	Capacity	Fluid Type
Engine oil (with filter)	8.5 L (9 US qt)	Mercury Full-Synthetic MerCruiser Engine Oil 20W-40

8. Start the engine and operate for three minutes, checking for leaks.
9. Stop the engine and allow the oil to drain into the oil pan for approximately five minutes with the boat at rest in the water.

Transmission Fluid

Checking While the Engine is Warm

1. Velvet Drive Transmissions - Stop engine and quickly check fluid level by turning T-handle counterclockwise, to remove dipstick. Fluid level should be up to full mark. If low, add specified fluid through dipstick tube on transmissions.
2. ZF Marine Transmissions - Stop engine and remove dipstick to check level. If fluid is below top (Full) line, add specified fluid through dipstick hole. Do not overfill. Reinstall dipstick with cap fully seated.

Checking While Engine is Cold

NOTE: Cold Fluid Level Check: To ease checking the fluid level, the dipstick can be marked or scribed with a cold level mark.

1. Follow the procedure for the warm fluid level check, then allow the boat to sit overnight.
IMPORTANT: Be sure to push the dipstick all the way down into the dipstick tube when checking the fluid level.
2. Remove the dipstick, wipe clean and reinsert.
3. Remove the dipstick, observe the fluid level and mark the cold fluid level.
4. Reinstall the dipstick, tighten the T-handle securely. Do not overtighten.

Changing

Contact your authorized Mercury MerCruiser dealer.


Closed Cooling System

Coolant Requirement

NOTICE

Using propylene glycol antifreeze in the closed cooling system can damage the cooling system or the engine. Fill the closed cooling system with an ethylene glycol antifreeze solution suitable to the lowest temperature to which the engine will be exposed.

NOTE: All factory-installed closed cooling systems come filled with Extended Life Coolant. This antifreeze requires draining and replacing every five years or 1000 hours of operation, whichever comes first. The color of this antifreeze is orange. Any "top-off" fluid used must be Extended Life Coolant.

Tube Ref No.	Description	Where Used	Part No.
 122	Extended Life Antifreeze/ Coolant	Closed cooling system	92-877770K1


Checking Coolant Level

CAUTION

A sudden loss of pressure can cause hot coolant to boil and discharge violently resulting in serious injury from burns. Allow the engine to cool down before removing the coolant pressure cap.

IMPORTANT: Tighten the pressure cap securely.

1. The coolant level should be at the "FULL" mark on the coolant reservoir when the engine is cold.

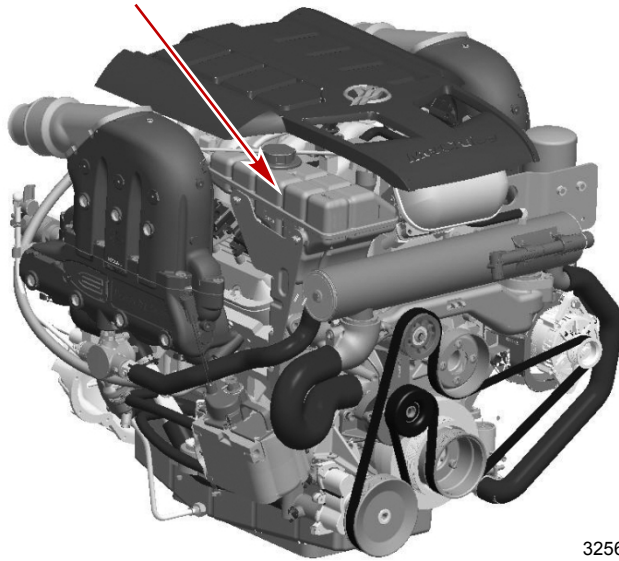

32566


Filling the Closed Cooling System

IMPORTANT: The engine must be cooled to ambient temperature to correctly perform the following procedure.

NOTICE

Using propylene glycol antifreeze in the closed cooling system can damage the cooling system or the engine. Fill the closed cooling system with an ethylene glycol antifreeze solution suitable to the lowest temperature to which the engine will be exposed.

The coolant section of the closed cooling system must be filled with a 50/50 mixture of Extended Life Coolant and distilled water.

Tube Ref No.	Description	Where Used	Part No.
 122	Extended Life Antifreeze/ Coolant	Closed cooling system	92-877770K1

NOTE: Coolant section capacity is approximately 22 Liter (23 US qt).

Model	8.1L (496 cid)
Closed cooling system	21.76 Liter (23 US qt)

⚠ CAUTION

A sudden loss of pressure can cause hot coolant to boil and discharge violently resulting in serious injury from burns. Allow the engine to cool down before removing the coolant pressure cap.

IMPORTANT: When filling the coolant section after it has been completely drained, the engine should be level or slightly lower at the flywheel end.

1. Remove the pressure cap from the coolant reservoir.
2. Fill the reservoir to the "FULL" mark with the recommended coolant solution.
3. When refilling the coolant section after it has been completely drained, fill the reservoir to within 12 mm (0.50 in.) of the top of the reservoir neck before starting the engine.
4. Replace the pressure cap.

NOTICE

Without sufficient cooling water, the engine, the water pump, and other components will overheat and suffer damage. Provide a sufficient supply of water to the water inlets during operation.

5. Supply cooling water to the engine.
6. With the engine running, check the hose connections, fittings, and gaskets for leaks. Also observe the engine temperature gauge to ensure that the engine operating temperature is normal. If the gauge indicates excessive temperature, stop the engine immediately and determine the cause.

⚠ CAUTION

A sudden loss of pressure can cause hot coolant to boil and discharge violently resulting in serious injury from burns. Allow the engine to cool down before removing the coolant pressure cap.

7. After the engine has cooled completely, recheck the coolant level and add coolant, if necessary.
8. If the reservoir was completely emptied of coolant, a significant amount of air remains in the cooling system. Refill the reservoir to the "FULL" mark, repeat the warm-up/cool-down cycle, and check the coolant level again.
9. Maintain the coolant level in the reservoir at or near the "FULL" mark with the engine cold.

Draining

Contact your authorized Mercury MerCruiser dealer.

Cleaning

Contact your authorized Mercury MerCruiser dealer.

Battery

Refer to specific instructions and warnings accompanying your battery. If this information is not available, observe the following precautions when handling a battery.

⚠ WARNING

Recharging a weak battery in the boat, or using jumper cables and a booster battery to start the engine, can cause serious injury or product damage from fire or explosion. Remove the battery from the boat and recharge in a ventilated area away from sparks or flames.

⚠ WARNING

An operating or charging battery produces gas that can ignite and explode, spraying out sulfuric acid, which can cause severe burns. Ventilate the area around the battery and wear protective equipment when handling or servicing batteries.

Multiple EFI Engine Battery Precautions

Alternators: Alternators are designed to charge the battery that supplies electrical power to the engine that the alternator is mounted on. When batteries for two different engines are connected, one alternator will supply all of the charging current for both batteries. Normally, the other engine's alternator will not be required to supply any charging current.

EFI electronic control module (ECM): The ECM requires a stable voltage source. During multiple engine operation, an onboard electrical device may cause a sudden drain of voltage at the engine's battery. The voltage may go below the ECM's minimum required voltage. Also, the alternator on the other engine may now start charging. This could cause a voltage spike in the engine's electrical system.

In either case, the ECM could shut off. When the voltage returns to the range that the ECM requires, the ECM will reset itself, and the engine will operate normally. The ECM shuts off and resets itself so quickly that the engine may only seem to have an ignition miss.

Batteries: Boats with multiengine EFI power packages require each engine be connected to its own battery. This ensures that the engine's ECM has a stable voltage source.

Battery switches: Battery switches should always be positioned so each engine is operating off of its own battery. Do not operate engines with switches in both or all position. In an emergency, another engine's battery can be used to start an engine with a dead battery.

Battery isolators: Isolators can be used to charge an auxiliary battery used for powering accessories in the boat. They should not be used to charge the battery of another engine in the boat unless the type of isolator is specifically designed for this purpose.


Generators: The generator's battery should be considered another engine's battery.

Cleaning the Flame Arrestor

⚠ WARNING

Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

1. Remove the engine cover.

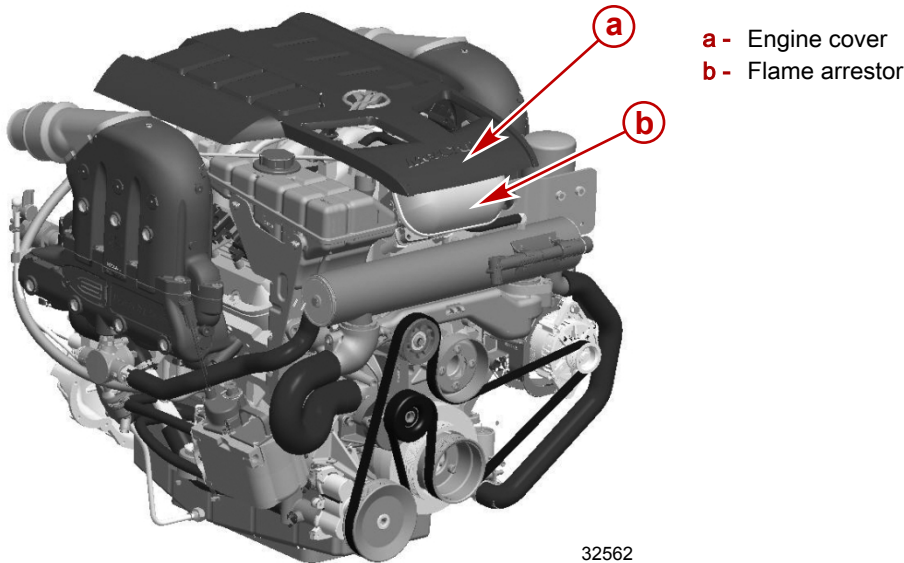

2. Loosen the flame arrestor clamp and remove the flame arrestor.
3. Clean the flame arrestor with solvent and dry with compressed air or set aside and allow to air dry completely.
4. Install the flame arrestor and tighten the clamp.
5. Install the engine cover.


Cleaning the IAC Muffler (Non-DTS Models Only)

⚠ WARNING

Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

1. Locate the idle air control valve (IAC) on the rear of the engine.

2. Remove the IAC muffler from the slot in the air valve plate using needle-nosed pliers.

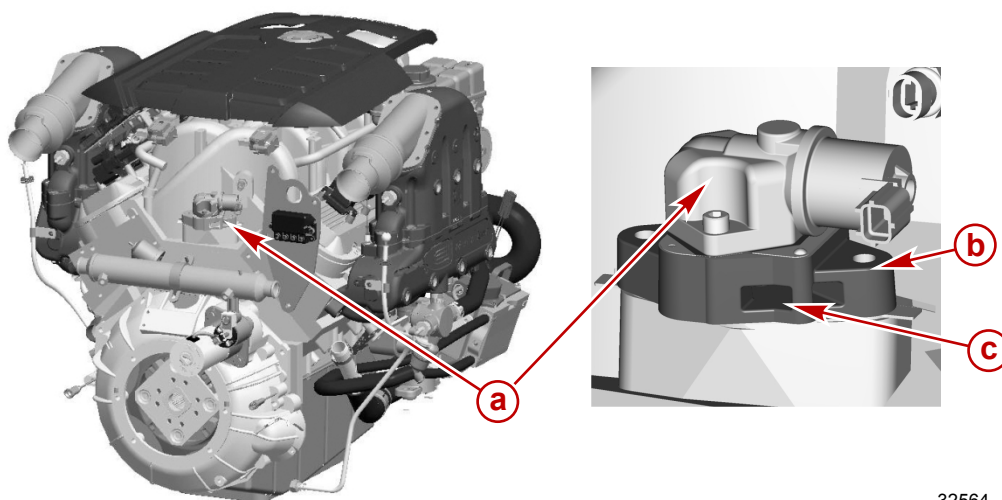

32564

- a - IAC
- b - Air valve plate
- c - IAC muffler location

3. Inspect the muffler for holes, cracks, or deterioration. Replace if damaged.
IMPORTANT: Do not use cleaner containing methyl ethyl ketone and do not get cleaner on electrical connections.
4. If possible, clean the muffler until white using warm water and mild detergent. Replace if necessary.
5. Allow the IAC muffler to dry completely before use.
6. Install the IAC muffler.

Water-Separating Fuel Filter


⚠ WARNING

Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

⚠ CAUTION

Failure to release pressure from the fuel system will result in fuel spraying out, which can cause a fire or explosion. Allow the engine to cool completely and release all fuel pressure before servicing any part of the fuel system. Always protect eyes and skin from pressurized fuel and vapors.

GEN III Models

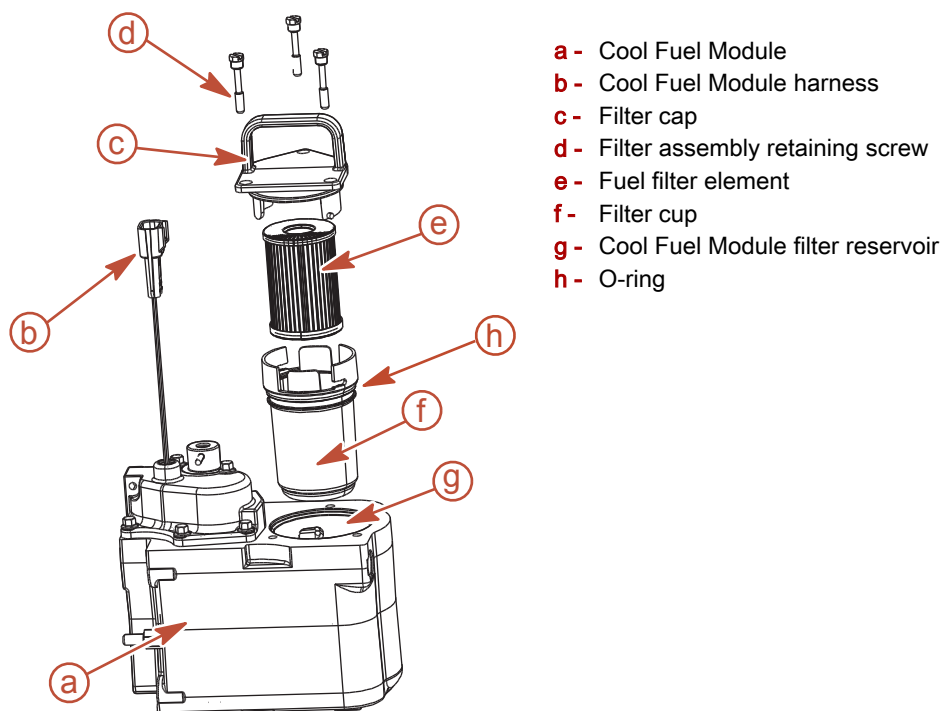

8837

Removal

1. Allow the engine to cool down.
NOTE: Mercury MerCruiser recommends that the engine be shut off for 12 hours prior to filter removal.
2. Close fuel supply valve, if equipped.
3. Disconnect the Cool Fuel Module harness from the engine wiring harness.
4. Turn the key switch to the start position and allow the starter to operate for 5 seconds.
5. Turn key switch to off position.
6. Loosen each filter assembly retaining screw until the screw is disengaged from the Cool Fuel Module. Do not remove the filter assembly retaining screws from the filter cap.
7. Unseat the filter assembly by grasping the filter assembly handle and pulling upward. Do not remove the filter assembly from the Cool Fuel Module at this time.
8. Allow any fuel that may be in the filter assembly to drain out through the bottom of the filter assembly and into the Cool Fuel Module filter reservoir.
9. Remove the filter cup from the filter cap by grasping the filter cap and rotating it in a clockwise direction while holding the filter cup stationary.
10. Remove the used water-separating fuel filter element from the filter cup, place it in a clean, approved container.
11. Dispose of any water or debris that may be in the filter cup.

Installation

1. Install a new water-separating fuel filter element into the filter cup. Push the element into the cup until completely seated.
2. Install new O-ring on the filter cup.
3. Attach the filter cap to the filter cup by grasping the filter cap and rotating it in a counter clockwise direction while holding the filter cup stationary, until the filter cap locks securely into place.
4. Install the fuel filter assembly slowly into the Cool Fuel Module to prevent spilling fuel, and align the screws retained in the filter cap with the screw holes in the Cool Fuel Module. Tighten the filter assembly retaining screws until hand tight.
5. Ensure that the filter cap is firmly seated against the Cool Fuel Module and torque each filter assembly retaining screw.

Description	Nm	lb. in.	lb. ft.
Filter assembly retaining screw	6	53	

6. Open fuel supply valve, if equipped.
7. Reconnect the Cool Fuel Module harness to the engine wiring harness.
8. Properly ventilate the engine compartment.

NOTICE


Without sufficient cooling water, the engine, the water pump, and other components will overheat and suffer damage. Provide a sufficient supply of water to the water inlets during operation.

9. Supply cooling water to the engine.
10. Start the engine. Check for gasoline leaks around the fuel filter assembly. If leaks exist, stop the engine immediately. Recheck the filter installation, clean spilled fuel and properly ventilate the engine compartment. If leaks continue, stop engine immediately and contact your authorized Mercury MerCruiser dealer.


Lubrication

Throttle Cable

1. Lubricate the pivot points and the guide contact surfaces.

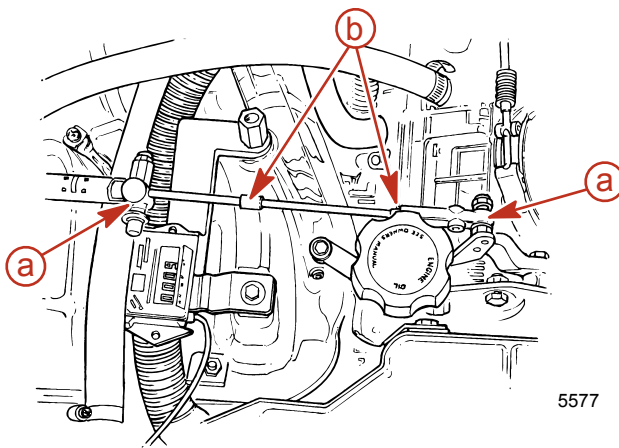


- a** - Pivot points
b - Guide contact surfaces

Tube Ref. No.	Description	Where Used	Part No.
	Synthetic Blend MerCruiser Engine Oil SAE25W-40	Throttle cable pivot points & guide contact surfaces	92-883725K01


Shift Cable - Typical

1. Lubricate the pivot points and the guide contact surfaces.

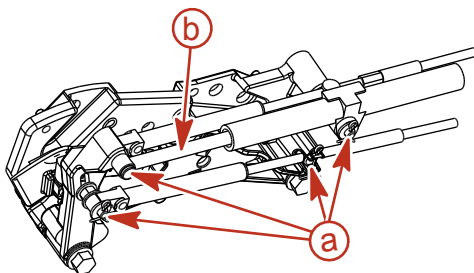

- a** - Pivot points
b - Guide contact surfaces


mc79736

Tube Ref. No.	Description	Where Used	Part No.
	Synthetic Blend MerCruiser Engine Oil SAE25W-40	Shift cable pivot points & guide contact surfaces	92-883725K01


Engine Coupler

Lubricate engine coupler splines through grease fittings on coupler by applying approximately 8-10 pumps of grease from a typical hand-operated grease gun.

NOTE: If the boat is operated at idle for prolonged periods of time, coupler should be lubricated every 50 hours.

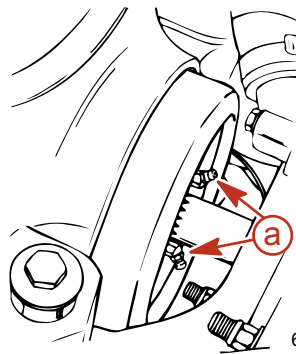



Bravo drive coupler
a - Grease fitting

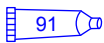 Tube Ref No.	Description	Where Used	Part No.
 91	Engine Coupler Spline Grease	Coupler	92-802869A 1


NOTE: The coupler and shaft splines can be lubricated without removing the sterndrive unit. Apply lubricant from a typical hand-operated grease gun until a small amount of grease begins to push out.

Driveshaft Extension Models

1. Lubricate the transom end grease fitting and engine end grease fitting by applying approximately 10–12 pumps of grease from a typical hand-operated grease gun.
2. Lubricate the driveshaft grease fittings by applying approximately 3–4 pumps of grease from a typical hand-operated grease gun.

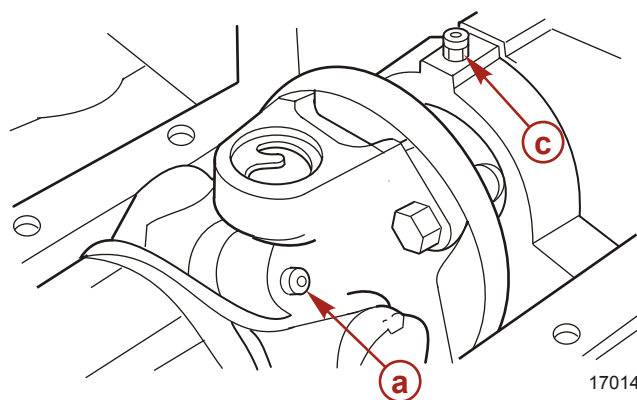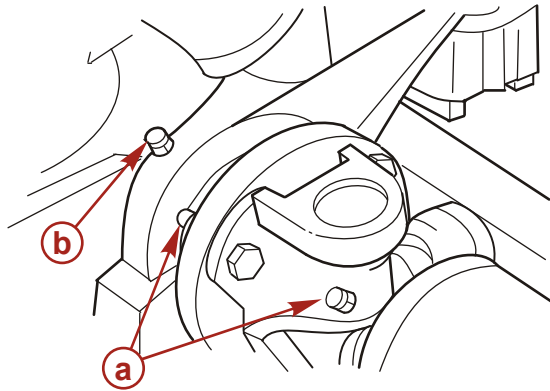

- a -** Driveshaft grease fittings
b - Transom end grease fitting
c - Engine end grease fitting


Tube Ref No.	Description	Where Used	Part No.
 42	U-Joint and Gimbal Bearing Grease	Transom end grease fitting, engine end grease fitting, driveshaft grease fittings	92-802870A1

Serpentine Drive Belt

Belt Routing

⚠ WARNING

Inspecting the belts with the engine running may cause serious injury or death. Turn off the engine and remove the ignition key before inspecting the belts.

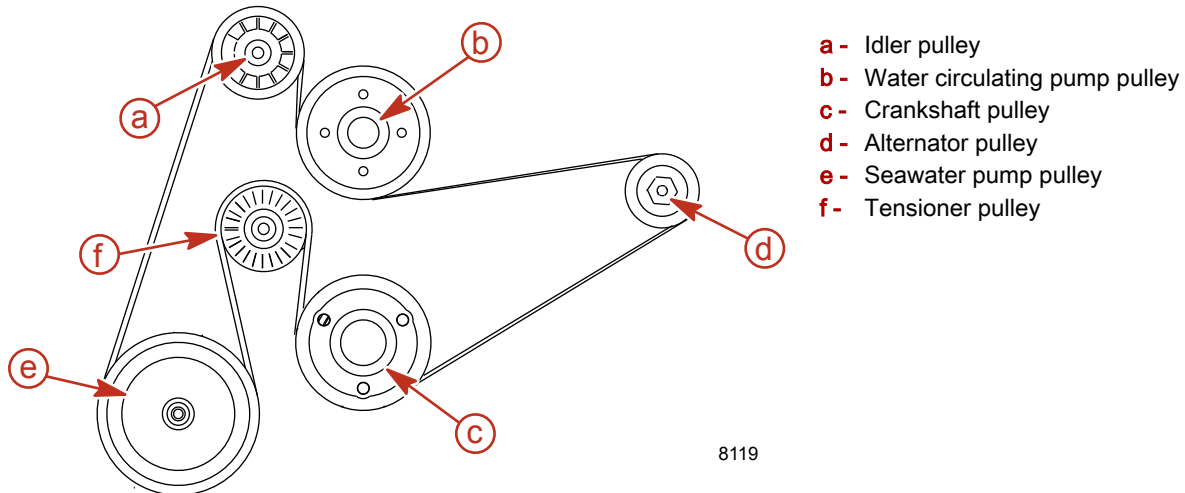

Checking


Inspect the drive belt for:

- Proper belt tension deflection
- Excessive wear
- Cracks
- Fraying
- Glazed surfaces
- Proper tension

Use moderate thumb pressure on the belt at the location with the longest distance between two pulleys.

Description	
Deflection	13 mm (1/2 in.)

NOTE: Minor, transverse cracks (across the belt width) may be acceptable. Longitudinal cracks (in the direction of belt length) that join transverse cracks are not acceptable.

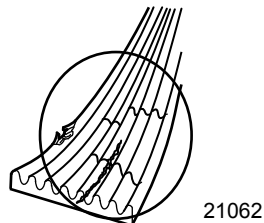

Replacing


IMPORTANT: If reusing a belt, install it in the same direction of rotation as before.

The belt tensioner operates within the limits of movement provided by the cast stops when the belt length and geometry are correct. If the tensioner contacts either of the cast stops during operation, check the mounting brackets and the belt length. Loose brackets, bracket failure, accessory drive component movement, incorrect belt length, or belt failure can cause the tensioner to contact the cast stops. See your authorized MerCruiser dealer for service if these conditions exist.

⚠ CAUTION

Rapid release of the belt tensioner, or allowing the tensioner to snap back quickly, could cause injury or product damage. Relieve the spring tension slowly.

1. Use a breaker bar and appropriate socket to relieve the tensioner. Rotate the tensioner away from belt until it stops.
2. Remove the belt from the idler pulley and slowly relieve the tension on the breaker bar.

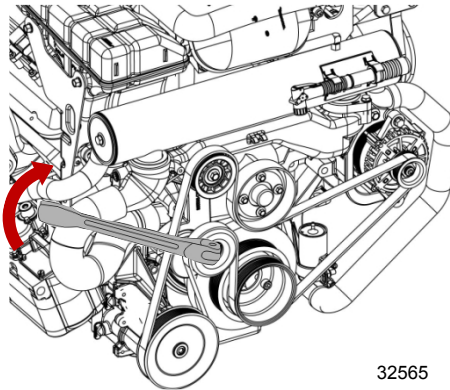

32565

3. Remove the belt and route the replacement belt according to the belt routing diagram.
4. Carefully release the tensioner and ensure that the belt stays properly positioned.
5. Use moderate thumb pressure on the belt at the location that has the longest distance between two pulleys.

Description	
Deflection	13 mm (1/2 in.)

Flushing the Seawater System—Inboard Models

The Boat Out of the Water—Inboard Models

IMPORTANT: Flushing the power package is most effective when performed with the boat out of the water.

IMPORTANT: We recommend flushing after each outing in salty, brackish, mineral-laden, or polluted water and before cold weather and extended storage.

⚠ WARNING

Rotating propellers can cause serious injury or death. Never operate the boat out of the water with a propeller installed. Before installing or removing a propeller, place the drive unit in neutral and engage the lanyard stop switch to prevent the engine from starting. Place a block of wood between the propeller blade and the anti-ventilation plate.

1. Close the seacock, if equipped, then disconnect the seawater inlet hose from the seawater pump.
2. If not equipped with a seacock, disconnect the seawater inlet hose from the seawater pump and immediately plug the hose.
3. Using a suitable adapter, connect the flushing hose from the water source to the water inlet of the seawater pump.

NOTICE

Flushing the engine when it is not operating will result in water collecting in the exhaust system, damaging the engine. Do not supply flush water for more than 15 seconds without the engine operating.

4. Completely open the water source to provide maximum water supply.
5. Place the remote control in the neutral idle speed position.
6. Start the engine.

NOTICE

Operating the engine out of the water at high speeds creates suction, which can collapse the water supply hose and overheat the engine. Do not operate the engine above 1400 RPM out of the water and without sufficient cooling water supply.

7. Depress the throttle only button and slowly advance the throttle until the engine reaches 1300 RPM (\pm 100 RPM).
8. Observe the water temperature gauge to ensure that the engine is operating in the normal range.

9. Operate the engine with the transmission in neutral for a minimum of 10 minutes.
10. **For power packages operated in salty, brackish, mineral-laden, or polluted water:** Continue to operate the engine until the discharge water is clear.
11. Slowly return the throttle to idle speed position.
12. Stop the engine.
13. Immediately shut off the supply water and remove the flushing attachment.
14. Install the water inlet hose to the seawater inlet of the seawater pump. Tighten the hose clamp securely.

The Boat in the Water—Inboard Models

IMPORTANT: Flushing the power package is most effective when performed with the boat out of the water.

IMPORTANT: We recommend flushing the engine after each outing in salty, brackish, mineral-laden, or polluted water and before cold weather and extended storage.

NOTICE

Disconnecting the seawater inlet hose will cause water to enter the bilge resulting in engine damage. Close the seacock before disconnecting the seawater inlet hose. Plug the seawater inlet hose immediately after disconnecting it.

1. Close the seacock, if equipped, then disconnect the seawater inlet hose to prevent water from siphoning into the engine or boat.
2. If not equipped with a seacock, disconnect the seawater inlet hose from the seawater pump, and immediately plug the hose to prevent water from siphoning into the engine or boat.
3. Using a suitable adapter, connect the flushing hose from the water source to the water inlet of the seawater pump.

NOTICE

Flushing the engine when it is not operating will result in water collecting in the exhaust system, damaging the engine. Do not supply flush water for more than 15 seconds without the engine operating.

4. Completely open the water source to provide maximum water supply.
5. Place the remote control in the neutral idle speed position.
6. Immediately start the engine.

NOTICE

Operating the engine out of the water at high speeds creates suction, which can collapse the water supply hose and overheat the engine. Do not operate the engine above 1400 RPM out of the water and without sufficient cooling water supply.

7. Depress the throttle only button and slowly advance the throttle until the engine reaches 1300 RPM (\pm 100 RPM).
8. Observe the water temperature gauge to ensure that the engine is operating in the normal range.
9. Operate the engine with the transmission in neutral for a minimum of 10 minutes.
10. **For power packages operated in salty, brackish, mineral-laden, or polluted water:** Continue to operate the engine until the discharge water is clear.
11. Slowly return the throttle to idle speed position.
12. Stop the engine.
13. Immediately shut off the supply water and remove the flushing attachment.
14. Tag the ignition switch with an appropriate tag requiring the seacock to be opened or the seawater inlet hose to be reconnected prior to operating the engine.

Notes:

Section 6 - Storage

Table of Contents

Cold Weather or Extended Storage.....	64	Boat in the Water	66
Preparing Power Package for Storage.....	64	Boat Out of the Water	68
Engine and Fuel System Preparation	64	Manual Drain System.....	70
Draining the Seawater System.....	65	Boat in the Water	70
Drain System Identification.....	66	Boat out of the Water	70
Air Actuated Single Point Drain System	66	Battery Storage.....	70
Manual Drain System	66	Recommissioning the Power Package.....	71
Air Actuated Single Point Drain System.....	66		

Cold Weather or Extended Storage

IMPORTANT: Mercury MerCruiser strongly recommends that this service should be performed by an authorized Mercury MerCruiser dealer. Damage caused by freezing temperatures is not covered by the Mercury MerCruiser Limited Warranty.

NOTICE

Water trapped in the seawater section of the cooling system can cause corrosion or freeze damage. Drain the seawater section of the cooling system immediately after operation or before any length of storage in freezing temperatures. If the boat is in the water, keep the seacock closed until restarting the engine to prevent water from flowing back into the cooling system. If the boat is not fitted with a seacock, leave the water inlet hose disconnected and plugged.

NOTE: As a precautionary measure, attach a tag to the key switch or steering wheel of the boat reminding the operator to open the seacock or unplug and reconnect the water inlet hose before starting the engine.

IMPORTANT: Mercury MerCruiser requires that propylene glycol antifreeze, mixed to the manufacturers instructions, be used in the seawater section of the cooling system for freezing temperatures or extended storage. Ensure that the propylene glycol antifreeze contains a rust inhibitor and is recommended for use in marine engines. Be certain to follow the propylene glycol manufacturer's recommendations.

Preparing Power Package for Storage

1. Fill the fuel tanks with fresh gasoline (that does not contain alcohol) and a sufficient amount of Mercury/Quicksilver Gasoline Stabilizer for Marine Engines to treat the gasoline. Follow instructions on the container.
2. Check the antifreeze concentration. Refer to the **Specifications** section.
3. If the boat is to be placed in storage with fuel containing alcohol in fuel tanks (if fuel without alcohol is not available): Fuel tanks should be drained as low as possible and Mercury/Quicksilver Gasoline Stabilizer for Marine Engines added to any fuel remaining in the tank. Refer to **Fuel Requirements** for additional information.
4. Flush the cooling system. Refer to the **Maintenance** section.
5. Supply cooling water to engine. Refer to the **Maintenance** section.
6. Operate the engine sufficiently to bring it up to normal operating temperature and allow fuel with Mercury/Quicksilver Gasoline Stabilizer for Marine Engines to circulate through the fuel system. Shut off the engine.
7. Change the oil and oil filter.
8. Prepare the engine and fuel system for storage. See **Engine and Fuel System Preparation**.
9. Drain the engine seawater cooling system. See **Draining the Seawater System**.

NOTICE

Water trapped in the seawater section of the cooling system can cause corrosion or freeze damage. Drain the seawater section of the cooling system immediately after operation or before any length of storage in freezing temperatures. If the boat is in the water, keep the seacock closed until restarting the engine to prevent water from flowing back into the cooling system. If the boat is not fitted with a seacock, leave the water inlet hose disconnected and plugged.

10. For additional assurance against freezing and rust, after draining, fill the seawater cooling system with propylene glycol mixed to the manufacturer's recommendation to protect engine to the lowest temperature to which it will be exposed during freezing temperatures or extended storage.
11. Store the battery according to the manufacturer's instructions.

Engine and Fuel System Preparation

⚠ WARNING

Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

 

⚠ WARNING

Fuel vapors trapped in the engine compartment may be an irritant, cause difficulty breathing, or may ignite resulting in a fire or explosion. Always ventilate the engine compartment before servicing the power package.

NOTICE

Running out of fuel can damage catalyst components. Do not allow the fuel tanks to become empty during operation.

1. In a 23 Liter (6 US gal) remote fuel tank mix:
 - a. 19 Liter (5 US gal) regular unleaded 87 octane (90 RON) gasoline
 - b. 1.89 Liter (2 US qt) Premium Plus 2-Cycle TC-W3 Outboard Oil
 - c. 150 ml (5 oz) Fuel System Treatment and Stabilizer or 30 ml (1 oz) Fuel System Treatment and Stabilizer Concentrate

Tube Ref No.	Description	Where Used	Part No.
 115	Premium Plus 2-Cycle TC-W3 Outboard Oil	Fuel system	92-858026K01
 124	Fuel System Treatment and Stabilizer	Fuel system	92-8M0047932

2. Allow the engine to cool.
IMPORTANT: Immediately wipe up any fuel spills or sprays.
3. Close the fuel shut off valve, if equipped. Disconnect and plug the fuel inlet fitting if not equipped with a fuel shut off valve.
4. Connect the remote fuel tank (with the fogging mixture) to the fuel inlet fitting.
IMPORTANT: Supply cooling water to the engine.
5. Start and operate the engine at 1300 RPM for five minutes.
6. After the specified operating time is complete, slowly return the throttle to idle and shut the engine off.
IMPORTANT: Ensure that some fogging mixture remains in the engine. Do not allow the engine's fuel system to become completely dry.
7. Replace the water separating fuel filter element. Refer to **Section 5**.

Draining the Seawater System

⚠ CAUTION

Water can enter the bilge when the drain system is open, damaging the engine or causing the boat to sink. Remove the boat from the water or close the seacock, disconnect and plug the seawater inlet hose, and ensure the bilge pump is operational before draining. Do not operate the engine with the drain system open.

IMPORTANT: Only drain the seawater section of the closed cooling system.

IMPORTANT: The boat must be as level as possible to ensure complete draining of the cooling system.



Your power package is equipped with a drain system. Refer to **Drain System Identification** to determine which instructions apply to your power package.

IMPORTANT: The engine must not be operating at any point during the draining procedure.


IMPORTANT: Mercury MerCruiser requires that propylene glycol antifreeze, mixed to the manufacturer's instructions, be used in the seawater section of the cooling system for freezing temperatures or extended storage. Ensure that the propylene glycol antifreeze contains a rust inhibitor and is recommended for use in marine engines. Be certain to follow the propylene glycol manufacturer's recommendations.

Drain System Identification

Air Actuated Single Point Drain System

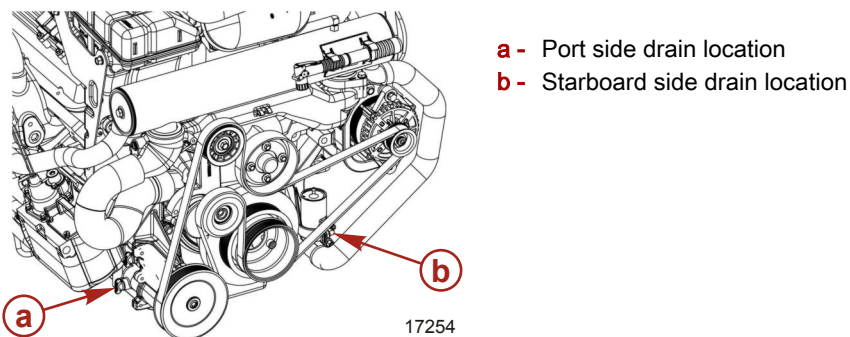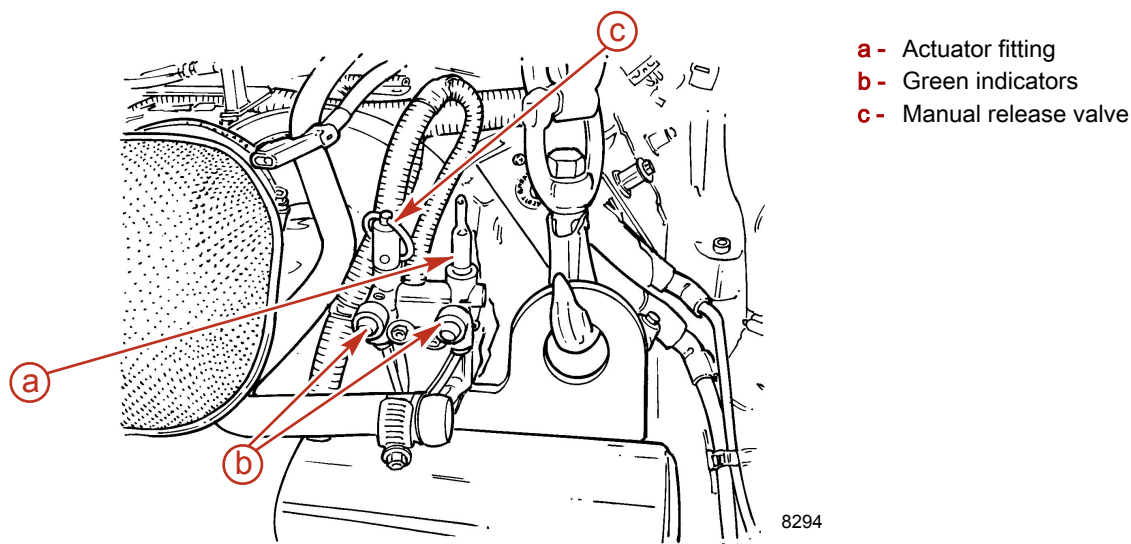

Manual Drain System

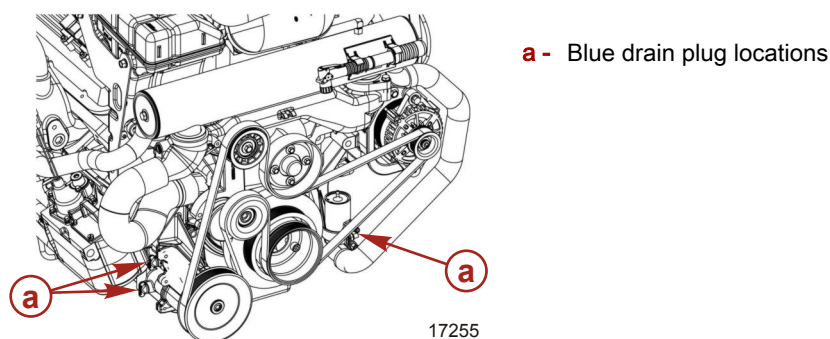


Air Actuated Single Point Drain System

Boat in the Water


NOTE: This procedure is written for the air pump that is attached to the engine. However, any air source can be used.

1. Close the seacock (if equipped) or remove and plug the water inlet hose.
2. Remove the air pump from the engine.
3. Ensure that the lever on top of the pump is flush with the handle (horizontal).
4. Install the air pump on the actuator fitting.


5. Pull lever on air pump (vertical) to lock pump on the fitting.

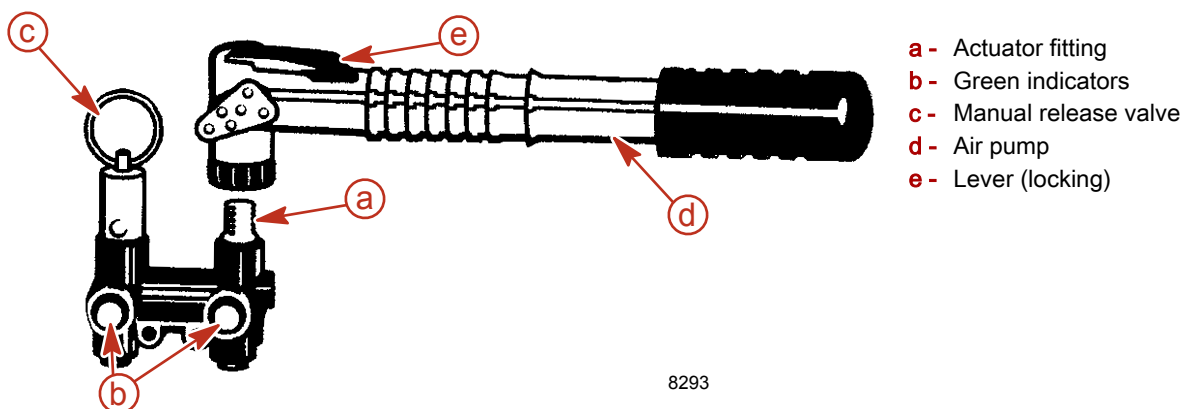

6. Pump air into the system until both green indicators extend and water drains from both sides of the engine. The port side will begin draining before the starboard side.

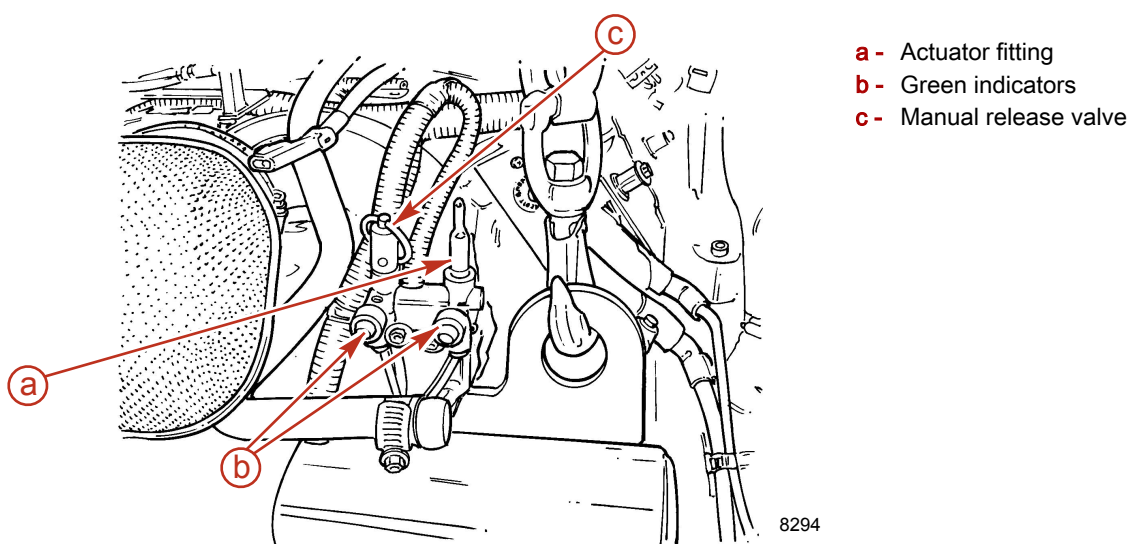


7. Verify that water is draining from each opening. If not, use the **Manual Drain System** instructions.

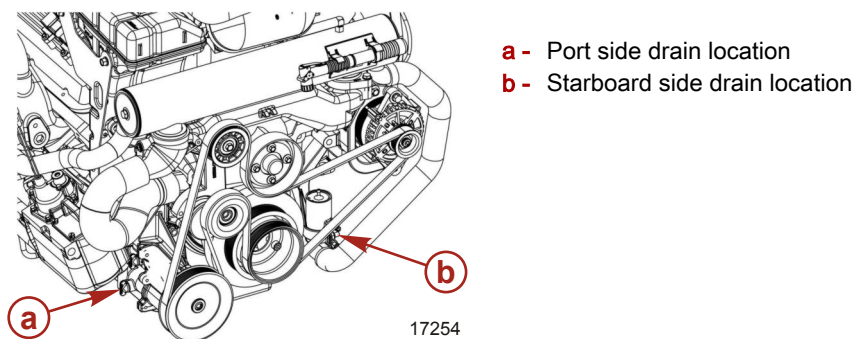

8. Allow the system to drain for a minimum of five minutes. Pump air as necessary to keep the green indicators extended.
9. For DTS engines, pull the lanyard stop switch (if equipped), or disable the ignition circuit by pulling the fuse marked "CD."
10. Crank the engine over slightly with the starter motor to purge any water trapped in the seawater pump. Do not allow engine to start.
11. Remove the air pump from the air manifold and return it to the mounting bracket.
12. Mercury MerCruiser recommends leaving the drain system open while transporting the boat or while performing other maintenance. This helps ensure that all water is drained.

13. Before launching the boat, pull up on the manual release valve. Verify that the green indicators are no longer extended.

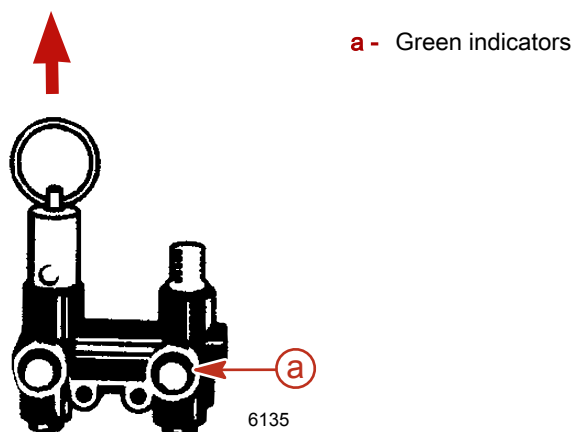


14. Open the seacock, if equipped, or unplug and reconnect the water inlet hose prior to operating the engine.


Boat Out of the Water

NOTE: This procedure is written for the air pump that is attached to the engine. However, any air source can be used.


1. Place the boat on a level surface to ensure complete draining of system.
2. Remove the air pump from the engine.
3. Ensure that the lever on top of the pump is flush with the handle (horizontal).
4. Install the air pump on the actuator fitting.
5. Pull lever on air pump (vertical) to lock pump on the fitting.

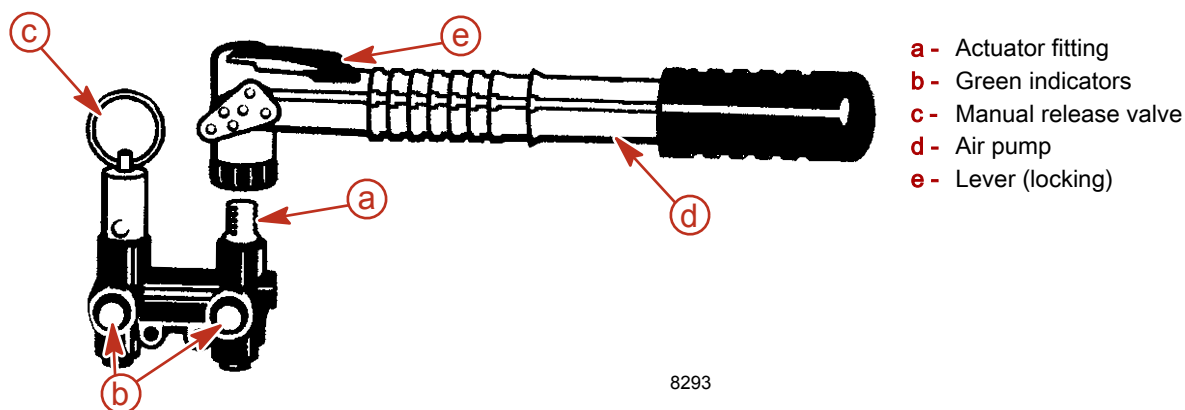


6. Pump air into the system until both green indicators extend and water drains from both sides of the engine. The port side will begin draining before the starboard side.

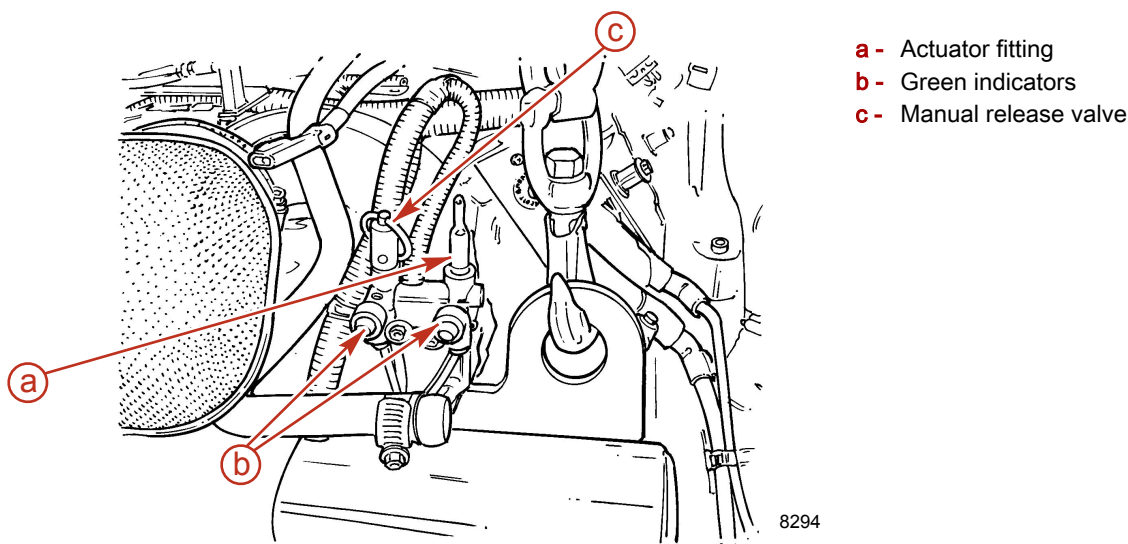

7. Verify that water is draining from each opening. If not, use the **Manual Drain System** instructions.

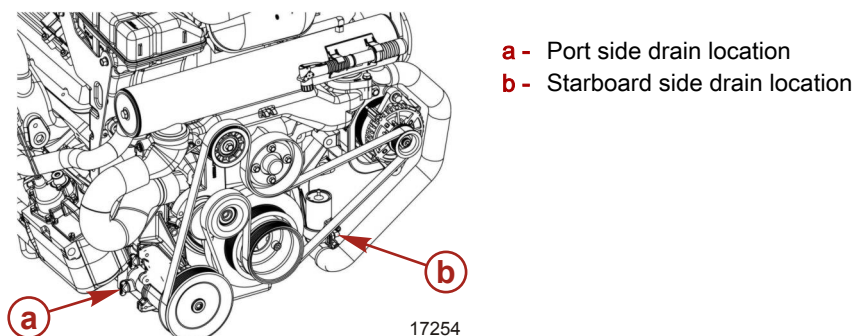

8. Allow the system to drain for a minimum of five minutes. Pump air as necessary to keep the green indicators extended.
9. For DTS engines, pull the lanyard stop switch (if equipped), or disable the ignition circuit by pulling the fuse marked "CD."
10. Crank the engine over slightly with starter motor to purge any water trapped in the seawater pump. Do not allow engine to start.
11. Remove the air pump from the air manifold and return it to the mounting bracket.
12. Mercury MerCruiser recommends leaving the drain system open while transporting the boat or while performing other maintenance. This helps ensure that all water is drained.
13. Before launching the boat, pull up on the manual release valve. Verify that the green indicators are no longer extended.

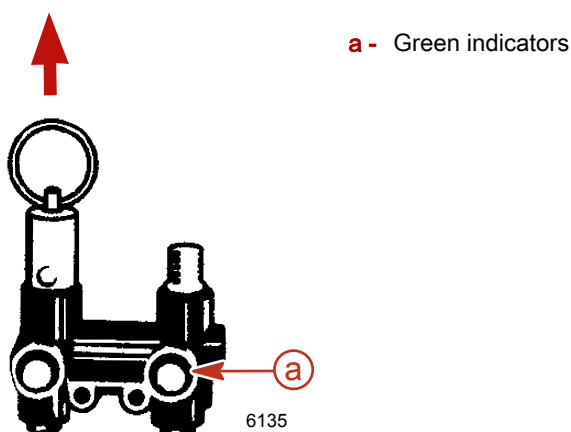


Manual Drain System

Boat in the Water

NOTE: Use this procedure if the air actuated single point drain system fails.

NOTE: It may be necessary to lift, bend, or lower hoses to allow water to completely drain when hoses are disconnected.

1. Close the seacock (if equipped) or remove and plug the water inlet hose.
2. Remove the two blue drain plugs from the seawater pickup pump (front, starboard side).

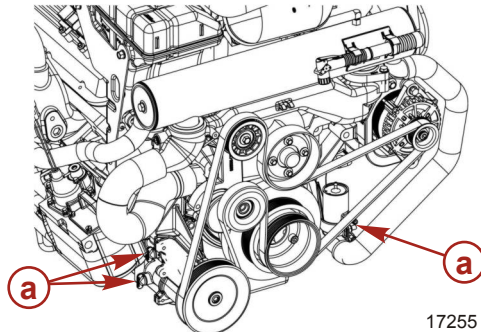

a - Blue drain plug locations


3. Verify that water is draining from each opening.
4. Allow the system to drain for a minimum of five minutes. Mercury MerCruiser recommends leaving the drain system open while transporting the boat or while performing other maintenance to ensure that all water is drained.
5. For DTS engines, pull the lanyard stop switch (if equipped), or disable the ignition circuit by pulling the fuse marked "CD".
6. Crank the engine over slightly with starter motor to purge any water trapped in the seawater pickup pump. Do not allow the engine to start.
7. Prior to launching the boat or starting the engine, close the drain system by installing the four blue drain plugs.
8. Open the seacock, if equipped, or unplug and reconnect the water inlet hose prior to operating the engine.

Boat out of the Water

NOTE: Use this procedure if the air actuated single point drain system fails.

NOTE: It may be necessary to lift, bend, or lower hoses to allow water to completely drain when hoses are disconnected.

1. Place the boat on a level surface to ensure complete draining of the system.
2. Remove two blue drain plugs from the seawater pickup pump (front, starboard side).

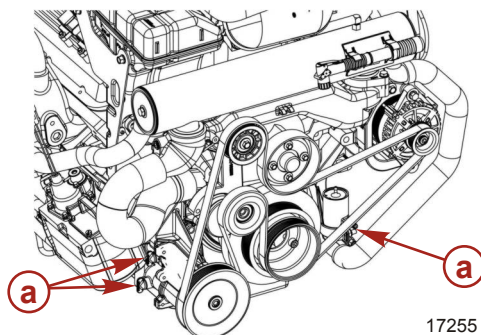

a - Blue drain plug locations

3. Verify that water is draining from each opening.
4. Allow the system to drain for a minimum of five minutes. Mercury MerCruiser recommends leaving the drain system open while transporting the boat or while performing other maintenance to ensure that all water is drained.
5. For DTS engines, pull the lanyard stop switch (if equipped), or disable the ignition circuit by pulling the fuse marked "CD".
6. Crank the engine over slightly with starter motor to purge any water trapped in the seawater pickup pump. Do not allow the engine to start.
7. Prior to launching the boat or starting the engine, close the drain system by installing the two blue drain plugs.

Battery Storage

Whenever the battery will be stored for an extended period of time, be sure the cells are full of water and the battery is fully charged and in good operating condition. It should be clean and free of leaks. Follow the battery manufacturer's instructions for storage.

Recommissioning the Power Package

1. Ensure that all cooling system hoses are connected properly and hose clamps are tight.

CAUTION

Disconnecting or connecting the battery cables in the incorrect order can cause injury from electrical shock or can damage the electrical system. Always disconnect the negative (-) battery cable first and connect it last.

2. Install a fully charged battery. Clean the battery cable clamps and terminals and reconnect cables. Tighten each cable clamp securely when connecting.
3. Coat the terminal connections with a battery terminal anticorrosion agent.
4. Perform all the checks in the before starting column of the **Operation Chart**.

NOTICE

Without sufficient cooling water, the engine, the water pump, and other components will overheat and suffer damage. Provide a sufficient supply of water to the water inlets during operation.

5. Start the engine and closely observe instrumentation to ensure that all systems are functioning correctly.
6. Carefully inspect the engine for fuel, oil, fluid, water and exhaust leaks.
7. Inspect the steering system, shift and throttle control for proper operation.

Notes:

Section 7 - Troubleshooting

Table of Contents

Diagnosing EFI Problems.....	74	Poor Performance.....	75
Diagnosing DTS Problems.....	74	Excessive Engine Temperature.....	75
Engine Guardian System.....	74	Insufficient Engine Temperature.....	75
Troubleshooting Charts.....	74	Low Engine Oil Pressure.....	76
Starter Motor Will Not Crank Engine, or Cranks Slowly		Battery Will Not Recharge.....	76
.....	74	Remote Control Is Difficult to Move, Has Excessive Play,	
Engine Will Not Start or Is Hard to Start.....	74	or Makes Unusual Sounds.....	76
Engine Runs Rough, Misses, or Backfires.....	75	Steering Wheel Jerks or Is Difficult to Turn.....	76

Diagnosing EFI Problems

Your authorized Mercury MerCruiser dealer has the proper service tools for diagnosing problems on Electronic Fuel Injection (EFI) Systems. The Electronic Control Module (ECM) on these engines has the ability to detect some problems with the system when they occur, and store a Trouble Code in the ECM's memory. This code can then be read later by a service technician using a special diagnostic tool.

Diagnosing DTS Problems

Your authorized Mercury MerCruiser dealer has the proper service tools for diagnosing problems on Digital Throttle and Shift (DTS) Systems. The Electronic Control Module (ECM)/Propulsion Control Module (PCM) on these engines has the ability to detect some problems with the system when they occur, and store a Trouble Code in the ECM/PCM's memory. This code can then be read later by a service technician using a special diagnostic tool.

Engine Guardian System

The Engine Guardian System monitors the critical sensors on the engine for any early indications of problems. The system will respond to a problem by emitting a continuous beep and/or reducing engine power in order to provide engine protection.

If Guardian System has been activated, reduce throttle speed. The horn will turn off when throttle speed is within the allowable limit. Consult an authorized Mercury MerCruiser dealer for assistance.

Troubleshooting Charts

Starter Motor Will Not Crank Engine, or Cranks Slowly

Possible Cause	Remedy
Battery switch turned off.	Turn the switch on.
Remote control not in neutral position.	Position the control lever in neutral.
Open circuit breaker or fuse.	Check and reset the main power circuit breaker or replace the fuse. Check the 5 amp fuse on the power harness connected to the battery, and replace if necessary.
Loose or dirty electrical connections or damaged wiring.	Check all electrical connections and wires (especially battery cables). Clean and tighten all faulty connections.
Bad battery or low battery voltage.	Test the battery and charge if necessary; replace if bad.
Lanyard stop switch activated.	Check the lanyard stop switch.

Engine Will Not Start or Is Hard to Start

Possible Cause	Remedy
Lanyard stop switch activated.	Check the lanyard stop switch.
Improper starting procedure.	Read the starting procedure.
Insufficient fuel supply.	Fill fuel tank or open valve.
Faulty ignition system component.	Service the ignition system.
Clogged fuel filter.	Replace fuel filter.
Stale or contaminated fuel.	Drain fuel tank. Fill with fresh fuel.
Fuel line or tank vent line kinked or clogged.	Replace kinked lines or blow out lines with compressed air to remove obstruction.
Faulty wire connections.	Check wire connections.
EFI system fault.	Have EFI System checked by an authorized Mercury MerCruiser dealer.

Engine Runs Rough, Misses, or Backfires

Possible Cause	Remedy
Clogged fuel filter.	Replace filter.
Stale or contaminated fuel.	If contaminated, drain tank. Fill with fresh fuel.
Kinked or clogged fuel line or fuel tank vent line.	Replace kinked lines or blow out lines with compressed air to remove obstruction.
Flame Arrestor dirty.	Clean Flame Arrestor.
Faulty ignition system component.	Service ignition system.
Idle speed too low.	Have EFI system checked by an authorized Mercury MerCruiser dealer.
EFI System fault.	Have EFI System checked by an authorized Mercury MerCruiser dealer.

Poor Performance

Possible Cause	Remedy
Throttle not fully open.	Inspect the throttle cable and linkages for proper operation.
Damaged or improper propeller.	Replace the propeller.
Excessive bilge water.	Drain and check for cause of entry.
Boat overloaded or load improperly distributed.	Reduce load or redistribute load more evenly.
Flame arrestor dirty.	Clean the flame arrestor.
Boat bottom fouled or damaged.	Clean or repair as necessary.
Ignition problem.	See Engine Runs Rough, Misses or Backfires .
Engine overheating.	See Excessive Engine Temperature .
EFI System fault	Have EFI System checked by an authorized Mercury MerCruiser dealer.

Excessive Engine Temperature

Possible Cause	Remedy
Water inlet or seacock closed.	Open.
Drive belt loose or in poor condition.	Replace or adjust belt.
Seawater pickups or sea strainer obstructed.	Remove obstruction.
Faulty thermostat.	Replace.
Coolant level (if equipped) low in closed cooling section.	Check for cause of low coolant level and repair. Fill system with proper coolant solution.
Heat Exchanger or Fluid Cooler plugged with foreign material	Clean Heat Exchanger, Engine Oil Cooler, and Transmission Oil Cooler (if equipped).
Loss of pressure in closed cooling section.	Check for leaks. Clean, inspect and test pressure cap.
Faulty seawater pickup pump.	Repair.
Seawater discharge restricted or plugged.	Clean exhaust elbows.

Insufficient Engine Temperature

Possible Cause	Remedy
Faulty thermostat.	Replace.

Low Engine Oil Pressure

Possible Cause	Remedy
Insufficient oil in crankcase.	Check and add oil.
Excessive oil in crankcase (causing it to become aerated).	Check and remove required amount of oil. Check for cause of excessive oil (improper filling).
Diluted or improper viscosity oil.	Change oil and oil filter, using correct grade and viscosity oil. Determine cause for dilution (excessive idling).

Battery Will Not Recharge

Possible Cause	Remedy
Excessive current draw from battery.	Turn off non-essential accessories.
Alternator drive belt loose or in poor condition.	Replace and/or adjust.
Unacceptable battery condition.	Test battery, replace if necessary.
Loose or dirty electrical connections or damaged wiring.	Check all associated electrical connections and wires (especially battery cables). Clean and tighten faulty connections. Repair or replace damaged wiring.
Faulty alternator	Test alternator output, replace if necessary.

Remote Control Is Difficult to Move, Has Excessive Play, or Makes Unusual Sounds

Possible Cause	Remedy
Insufficient lubrication on shift and throttle linkage fasteners.	Lubricate.
Obstruction in shift or throttle linkages.	Remove obstruction.
Loose or missing shift and throttle linkages.	Check all throttle linkages. If any are loose or missing, see authorized Mercury MerCruiser dealer immediately.
Shift or throttle cable kinked.	Straighten cable or have authorized Mercury MerCruiser dealer replace cable if damaged beyond repair.

Steering Wheel Jerks or Is Difficult to Turn

Possible Cause	Remedy
Low power steering pump fluid level.	Check for leak. Refill system with fluid.
Drive belt loose or in poor condition.	Replace and/or adjust.
Insufficient lubrication on steering components.	Lubricate.
Loose or missing steering fasteners or parts.	Check all parts and fasteners if any are loose or missing, see authorized Mercury MerCruiser dealer immediately.
Contaminated power steering fluid.	See authorized Mercury MerCruiser dealer.

Section 8 - Customer Assistance Information

Table of Contents

Owner Service Assistance.....	78	Parts and Accessories Inquiries	78
Local Repair Service	78	Resolving a Problem	78
Service Away From Home	78	Mercury Marine Service Offices	79
Stolen Power Package	78	Ordering Literature.....	79
Attention Required after Submersion	78	United States and Canada	79
Replacement Service Parts	78	Outside the United States and Canada	80

Owner Service Assistance

Local Repair Service

If you need service for your Mercury MerCruiser-powered boat, take it to your authorized dealer. Only authorized dealers specialize in Mercury MerCruiser products and have factory-trained mechanics, special tools and equipment, and genuine Quicksilver parts and accessories to properly service your engine.

NOTE: *Quicksilver parts and accessories are engineered and built by Mercury Marine specifically for Mercury MerCruiser sterndrives and inboards.*

Service Away From Home

If you are away from your local dealer and the need arises for service, contact the nearest authorized dealer. Refer to the Yellow Pages of the telephone directory. If, for any reason, you cannot obtain service, contact the nearest Regional Service Center. Outside the United States and Canada, contact the nearest Marine Power International Service Center.

Stolen Power Package

If your power package is stolen, immediately advise the local authorities and Mercury Marine of the model and serial numbers and to whom the recovery is to be reported. This information is maintained in a database at Mercury Marine to aid authorities and dealers in recovery of stolen power packages.

Attention Required after Submersion

1. Before recovery, contact an authorized Mercury MerCruiser dealer.
2. After recovery, immediate service by an authorized Mercury MerCruiser dealer is required to reduce the possibility of serious engine damage.

Replacement Service Parts

WARNING

Avoid fire or explosion hazard. Electrical, ignition, and fuel system components on Mercury Marine products comply with federal and international standards to minimize risk of fire or explosion. Do not use replacement electrical or fuel system components that do not comply with these standards. When servicing the electrical and fuel systems, properly install and tighten all components.

Marine engines are expected to operate at or near full throttle for most of their life. They are also expected to operate in both fresh and saltwater environments. These conditions require numerous special parts. Exercise care when replacing marine engine parts, because specifications are different from those of the standard automotive engine. For example, one of the most important special replacement parts, is the cylinder head gasket. Marine engines cannot use steel-type automotive head gaskets because saltwater is highly corrosive. A marine engine head gasket uses special materials to resist corrosion.

Because marine engines must be capable of running at or near maximum RPM much of the time, they also have special valve springs, valve lifters, pistons, bearings, camshafts and other heavy-duty moving parts.

Mercury MerCruiser marine engines have other special modifications to provide long life and dependable performance.

Parts and Accessories Inquiries

Direct any inquiries concerning Quicksilver replacement parts and accessories to your local authorized dealer. The dealer has the necessary information to order parts and accessories for you if they are not in stock. Only authorized dealers can purchase genuine Quicksilver parts and accessories from the factory. Mercury Marine does not sell to unauthorized dealers or retail customers. When inquiring on parts and accessories, the dealer requires the **engine model** and **serial numbers** to order the correct parts.

Resolving a Problem

Satisfaction with your Mercury MerCruiser product is very important to your dealer and to us. If you ever have a problem, question or concern about your power package, contact your dealer or any authorized Mercury MerCruiser dealership. If you need additional assistance:

1. Talk with the dealership's sales manager or service manager. Contact the owner of the dealership if the sales manager and service manager have been unable to resolve the problem.
2. If your question, concern, or problem cannot be resolved by your dealership, please contact Mercury Marine Service Office for assistance. Mercury Marine will work with you and your dealership to resolve all problems.

The following information will be needed by the Service Office:

- Your name and address

- Daytime telephone number
- Model and serial numbers for your power package
- The name and address of your dealership
- Nature of problem

Mercury Marine Service Offices are listed on the next page.

Mercury Marine Service Offices

For assistance, call, fax or write. Please include your daytime telephone number with mail and fax correspondence.

Telephone	Fax	Mail
(405) 743 6566	(405) 743 6570	Mercury MerCruiser 3003 N. Perkins Rd. Stillwater, OK 74075
(905) 567 MERC (6372)	(905) 567 8515	Mercury Marine Ltd. 2395 Meadowpine Blvd. Mississauga, Ontario L5N 7W6 Canada
(61) (3) 9791 5822	(61) (3) 9793 5880	Mercury Marine Australia 132-140 Frankston Road Dandenong, Victoria 3164 Australia
(32) (87) 32 32 11	(32) (87) 31 19 65	Marine Power - Europe, Inc. Parc Industriel de Petit-Rechain B-4800 Verviers, Belgium
(954) 744 3500	(954) 744 3535	Mercury Marine - Latin America & Caribbean 11650 Interchange Circle North, Miramar, FL 33025 U.S.A.
(81) 53 423 2500	(81) 53 423 2510	Mercury Marine - Japan 283-1 Anshin-cho Hamamatsu, Shizuoka 435-0005 Japan
(65) 6546 6160	(65) 6546 7789	Mercury Marine Singapore 72 Loyang Way , 508762 Singapore

Ordering Literature

Before ordering literature, please have the following information about your power package available:

- Model
- Serial number
- Horsepower
- Year built

United States and Canada

For information on additional literature that is available for your particular Mercury MerCruiser power package and how to order that literature contact your nearest dealer or contact us at:

Mercury Marine Publications
P.O. Box 1939
Fond du Lac, WI 54936-1939
(920) 929 5110
Fax (920) 929 4894

Outside the United States and Canada

Contact your nearest dealer or Marine Power Service Center for information on additional literature that is available for your particular Mercury MerCruiser power package and how to order that literature.

Print or type your mailing address, which be used as your shipping label, and include your order and payment. Mail to:

Mercury Marine

Attn: Publications Department

W6250 West Pioneer Road

P.O. Box 1939

Fond du Lac, WI 54936-1939

USA